


2

Bass And Treble Tone Control

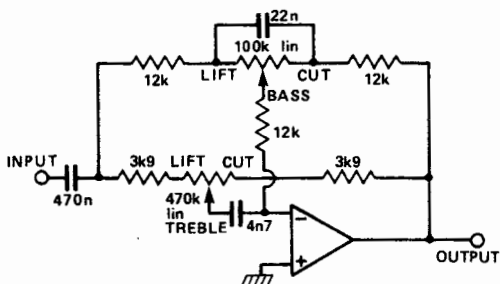

4

Middle Tone Control

Input must have a DC path to ground

