



# ECO-3 PCB

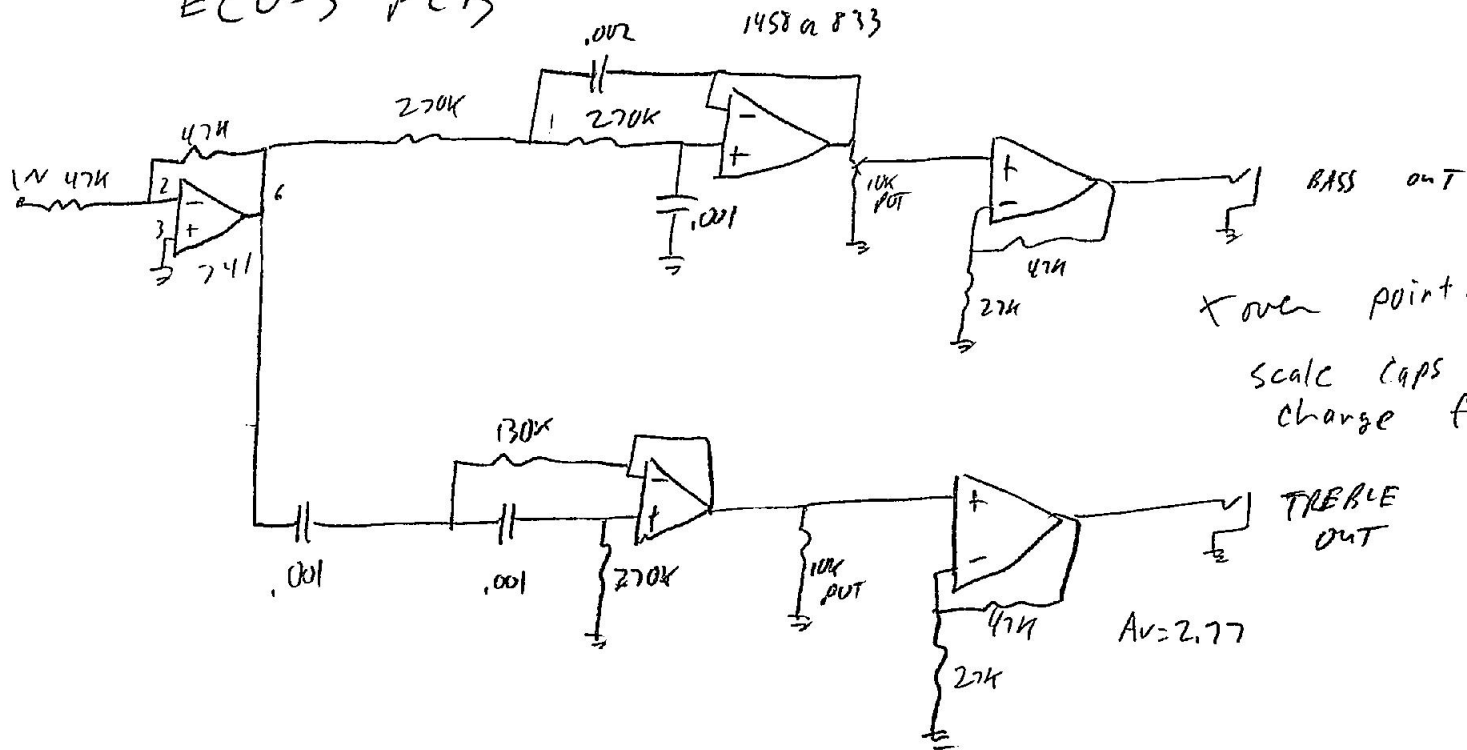

Corner point = 800Hz  
 Scale caps up or down to  
 change frequencies

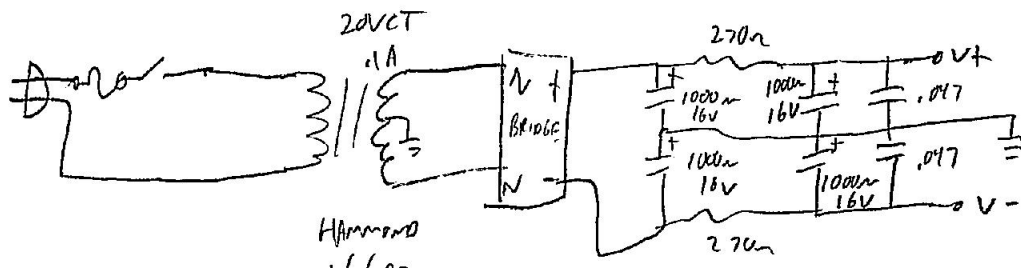

Dan Fraser  
 1979

