
Special KI-1955

RANHHELD Remote



Rauland-Borg Corporation

Issued: 07/08/98

Page 1 of 7

General

TV Input: changes between baseband (video) and broadband (RF) inputs of the TV.

The **red LED** will flash whenever you push a button on the remote. If it does not flash, change the batteries

The **Set** button has no function

Power: turns the TV on/off.

CC: activates closed captioning if the TV is equipped with this function

Local: changes between headend and local (in room) inputs for classroom viewing.

Menu: displays on-screen selections available to the classroom. Each selection may contain submenus.

Volume: changes the volume level of the TV.

Frame: use this button and the number buttons to go to a specific frame in the courseware.

Mute: mutes the TV audio

Search: use in conjunction with the menu button. Steps through the on-screen menu selections

Play: use to move forward in the selected courseware; also use for “up” mouse control

Stop: stops the courseware, also toggles the Vflo on and off

Rewind: rewinds and reverses playback of the courseware; also use for “left” mouse control.

Chapter: use in conjunction with the number buttons to go to a specific chapter in the courseware

The **red button** has no function

Enter: Use in conjunction with other buttons to activate a selection.

Fast Forward: fast forwards the courseware; also use for “right” mouse control.

Clear: clears the last numeric command entered

Pause: pauses the courseware; also use for “down” mouse control




Display: toggles the display mode of the selected courseware machine.

Step Forward: moves the selected courseware forward a frame at a time.


Lesson Plan Block: for controlling a scheduled lesson plan

Audio: changes the audio mode of a laser disc player



Classroom Control

 <p>1. Press Power to toggle the classroom TV power. If the system requires login, log in using the classroom panel.</p>	 <p>2. Press Vol to raise the volume up an increment at a time. Press Vol to lower the volume.</p>	 <p>3. Press Mute to toggle the sound On/Off for the program that you are watching.</p>
--	---	---


Select a Source

 <p>1. Press Menu to access the on-screen menu display.</p>	<p>2. The on-screen menu system displays choices that are available in the classroom. <i>Note:</i> Each menu item shown contains additional selections.</p>	<p>3. Use the Search keys to move the selection arrow. Press Enter to select. Once an item is selected, use these keys to switch to resources within that menu.</p>
<p>TV Menu</p> <p>4. Select <i>TV</i> to view TV programs that are always available. Press Enter to view the program. Select <i>Menu</i> to return to the main menu.</p>	<p>Courseware Menu</p> <p>5. Select <i>Courseware</i> from the main menu to choose items you have reserved. Press Enter to view. Select <i>Menu</i> for the main menu.</p>	<p>Lesson Plan Menu</p> <p>6. Select <i>Lesson Plan</i> from the main menu to choose a Lesson Plan you have reserved. Select <i>Fwd</i> to view. Select <i>Menu</i> for the main menu.</p>


Toggleing a Computer Source or Input Device

 <p>1. Push TV Input to cycle between TV monitor inputs (e.g., V1, V2, Ext. 1, Ext. 2). <i>Note:</i> You must have the appropriate scan conversion hardware to connect a computer source to the classroom monitor.</p>	 <p>2. Push Local to switch between the media center (headend) video source and classroom video source.</p>
--	---



LP Control


<p>1. Reset resets a lesson plan to the first step. Fwd moves a lesson forward. Back moves a lesson plan back to the last user step. Stop pauses an LP.</p>



VCR Control

<p>1. To start a tape press Play (). To halt a program momentarily, press Pause (II). To stop a program for more than one minute, press Stop (Y).</p>	<p>2. To rapidly move ahead, press Fast Forward (). To rapidly move back press Rewind ().</p>	 <p>3. To time search, the VCR must be in the Stop or Play mode. Press Frame + <playing time to skip> (H:MM) + Enter. Press or to indicate direction. The tape plays after search.</p>
---	---	--



Video Floppy Control

<p>1. If after selecting a video floppy source the monitor shows no image, the machine may be off. To turn on, press Stop and wait 5-10 seconds.</p>	 <p>2. Step or Step moves a video floppy disc backward or forward a frame at a time. Play starts the Auto Advance Mode (default time interval is 4 seconds). Push Play again to stop auto advance.</p>	 <p>3. Frame + <Frame #> + Enter will move to a specific frame.</p> <p>4. Display toggles the frame numbers display on the monitor.</p>
---	---	--

CD-I Control

 <p>1. Play starts a program and is the equivalent of a mouse click. Use the Play (), Pause () keys to control the cursor and emulate the CD-I mouse or joystick.</p>	 <p>2. Play () moves the cursor up. Pause () moves the cursor down. moves the cursor left. moves the cursor right. Press Play when prompted to make a selection.</p>
--	---

Laser Disc Control

 <p>1. To start a disc press Play (). To halt, press Pause (). To step forward or backward between frames press Step or Step. <i>Note:</i> do not press Stop to temporarily halt a laser disc.</p>	<p>2. Fast Forward () or Rewind () moves a CAV disc backwards or forward by frame. Holding either key down scans CLV discs.</p>	<p>3. On CAV discs, Chapter + <Chapter #> + Enter will move to a specific chapter. Frame + <Frame #> + Enter will move to a specific frame.</p>
<p>4. On CLV discs, press Frame + <H:MM:SS> + Enter to move to a specific time location on the disc. To start a program press Play.</p>	 <p>5. To view the chapter or frame numbers (time on CLV discs) press Display. Repeat the procedure to toggle the display off.</p>	