

SONY ID CODES update 10-20-2000

The following are the ID codes used in miscellaneous Sony television receivers. It is the intent to list all Sony ID codes in the event the service manual is not available and the EE-prom has been changed. Without the ID codes you will not be able to set up the television. It will not function correctly, and most likely loose features.
TO ENTER THE SERVICE MODE PRESS THE FOLLOWING BUTTONS ON REMOTE:

On remote control "Press"

DISPLAY

"5"

"VOLUME +"

"POWER"

To WRITE TO EEPROM "Press"

"MUTING"

"ENTER"

To INITIALIZE EEPROM "Press"

"8"

"ENTER"

MODEL	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6	ID-7
KP4165(US)	25	55	31	1	155	177	198	66
KP41T15	120	127	106	64	80	NA	NA	NA
KP41T65(CND)	25	55	31	1	155	177	198	66
KP46C36	25	55	31	0	155	177	198	66
KP46C65(CND)	25	55	31	1	155	177	198	66
KP46C65(US)	25	55	31	1	155	177	198	66
KP46S15	120	127	106	64	80	NA	NA	NA
KP46S25	120	127	106	36	80	NA	NA	NA
KP46S65	25	55	31	1	155	177	198	66
KP46V25	120	127	122	36	20	NA	NA	NA
KP48S35	25	21	31	0	155	177	198	66
KP48S65(CND)	25	55	31	1	155	177	198	66
KP48S65(US)	25	55	31	1	155	177	198	66
KP48V75	25	55	47	0	155	181	214	71
KP53S15	120	127	106	64	80	NA	NA	NA
KP53S25	120	127	106	36	80	NA	NA	NA
KP53S35	25	21	31	0	155	177	198	66
KP53S65(CND)	25	55	31	1	155	177	198	66
KP53S65(US)	25	55	31	1	155	177	198	66
KP53S65(US)	25	55	31	1	155	177	198	66
KP53V25	120	127	122	36	20	NA	NA	NA
KP53V75	25	55	47	0	155	181	214	71
KP61S35	25	21	31	0	155	177	198	66
KP61S65(CND)	25	55	31	1	155	177	198	66
KP61S65(US)	25	55	31	1	155	177	198	66
KP61V25	120	127	122	36	20	NA	NA	NA
KP61V75	25	55	47	0	155	181	214	71
KP61XBR48	120	127	122	36	20	NA	NA	NA
KV27FV15(CND)	89	63	175	112	203	181	6	0
KV26S65	153	27	15	195	31	1	7	64
KV26S65(CND)	129	27	15	195	31	1	7	64
KV27S20	25	1	31	0	27	0	0	0
KV27S20(CND)	9	1	31	0	27	0	0	0
KV27S22(CND)	9	1	31	10	27	1	0	0
KV27S22(U)	25	1	31	10	27	1	0	0
KV27S25	25	25	31	0	27	0	1	0
KV27S26(CND)	9	21	31	10	27	129	1	0
KV27S26(U)	25	21	31	10	27	129	1	0
KV27S36(CND)	9	21	31	10	27	129	6	0

SONY ID CODES update 10-20-2000

The following are the ID codes used in miscellaneous Sony television receivers. It is the intent to list all Sony ID codes in the event the service manual is not available and the EE-prom has been changed. Without the ID codes you will not be able to set up the television. It will not function correctly, and most likely loose features.
TO ENTER THE SERVICE MODE PRESS THE FOLLOWING BUTTONS ON REMOTE:

On remote control "Press"

DISPLAY

"5"

"VOLUME +"

"POWER"

To WRITE TO EEPROM "Press"

"MUTING"

"ENTER"

To INITIALIZE EEPROM "Press"

"8"

"ENTER"

MODEL	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6	ID-7
KV27S36(U)	25	21	31	10	27	129	9	0
KV27S40	153	1	13	195	31	1	0	64
KV27S40(CND)	129	1	13	195	31	1	0	64
KV27S45	153	27	13	195	31	1	1	64
KV27S45(CND)	129	27	13	195	31	1	1	64
KV27TS29 (CND)	64	127	0	0	16	NA	NA	NA
KV27TS29 (US)	64	127	64	0	16	NA	NA	NA
KV27TS32 (US)	120	127	104	0	16	NA	NA	NA
KV27TS36 (CND)	120	127	8	64	16	NA	NA	NA
KV27TS36 (US)	120	127	72	64	16	NA	NA	NA
KV27V10	120	127	72	0	17	NA	NA	NA
KV27V20(C)	25	19	47	0	27	3	0	0
KV27V20(U)	9	19	47	10	27	131	0	0
KV27V22(CND)	9	19	47	10	27	131	0	0
KV27V22(U)	25	19	47	10	27	131	0	0
KV27V25(C)	25	23	47	0	27	135	1	0
KV27V25(U)	25	23	47	10	27	135	1	0
KV27V26(U)	25	23	47	10	27	135	1	0
KV27V35(U)	25	23	47	0	27	143	6	0
KV27V36 (U)	25	23	47	10	27	159	6	0
KV27V36(CND)	9	23	47	10	27	159	6	0
KV27V40(CND)	129	19	173	194	31	1	0	64
KV27V40(US)	153	19	173	194	31	1	0	64
KV27V45(CND)	129	23	173	194	31	1	1	64
KV27V45(US)	153	23	173	194	31	1	1	64
KV27V65(CND)	129	19	175	194	31	1	7	64
KV27V65(US)	153	23	175	194	31	1	7	64
KV27XBR45	120	127	126	52	28	NA	NA	NA
KV29PS1	25	1	31	0	27	0	0	0
KV29PS2	25	1	31	10	27	1	0	0
KV29RS20	25	1	31	0	27	0	0	0
KV29RS20C	25	1	31	0	27	0	0	0
KV29RS22	25	1	31	10	27	1	0	0
KV29RS22(C)	25	1	31	10	27	1	0	0
KV29RS22(K)	137	1	31	10	27	1	0	0
KV29RS22T	9	1	31	10	27	1	0	0
KV29RS25	25	21	31	0	27	0	1	0

SONY ID CODES update 10-20-2000

The following are the ID codes used in miscellaneous Sony television receivers. It is the intent to list all Sony ID codes in the event the service manual is not available and the EE-prom has been changed. Without the ID codes you will not be able to set up the television. It will not function correctly, and most likely loose features.
TO ENTER THE SERVICE MODE PRESS THE FOLLOWING BUTTONS ON REMOTE:

On remote control "Press"

DISPLAY

"5"

"VOLUME +"

"POWER"

To WRITE TO EEPROM "Press"

"MUTING"

"ENTER"

To INITIALIZE EEPROM "Press"

"8"

"ENTER"

MODEL	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6	ID-7
KV29RS25C	25	21	31	0	27	0	1	0
KV29RS26	25	21	31	10	27	129	1	0
KV29RS26C	25	21	31	10	27	129	1	0
KV29SD1	25	1	31	0	27	0	0	0
KV29SD2	25	1	31	10	27	1	0	0
KV29SD2T	9	1	31	10	27	1	0	0
KV29SL40	145	1	141	195	63	1	0	64
KV29SL40A	151	1	141	195	55	1	0	64
KV29SL40C	145	1	141	195	63	1	0	64
KV29SL45	145	27	141	195	63	1	1	64
KV29SL65	145	27	143	195	63	1	7	64
KV29SL65C	145	19	143	195	63	1	7	64
KV29V22M	25	19	47	10	27	131	0	0
KV29V22T	9	19	47	10	27	131	0	0
KV29V36C	25	23	47	10	27	159	6	0
KV29V36K	137	23	47	10	27	159	6	0
KV29V66M	25	23	47	10	27	135	1	0
KV29V76M	25	23	47	10	27	159	6	0
KV29V76T	9	23	47	10	27	159	6	0
KV29VL40	145	23	173	194	63	1	0	64
KV29VL65A	151	23	175	194	55	1	7	64
KV29VL65C	145	23	175	194	63	1	7	64
KV29VL85	145	23	173	194	63	1	1	64
KV29VL95	145	23	175	194	63	1	7	64
KV29XL40M	145	1	141	195	63	1	0	64
KV29XL40P	145	1	141	195	63	1	0	64
KV29XT11A	151	1	141	195	55	1	0	64
KV32FS10	89	63	47	96	203	177	0	0
KV32FS10(CND)	89	63	47	112	203	177	0	0
KV32FV1	89	63	47	0	139	173	6	0
KV32FV1(CND)	89	63	47	0	139	173	6	0
KV32FV10	25	63	175	64	251	177	0	0
KV32FV15	89	63	175	96	203	181	6	0
KV32S12	120	123	72	0	16	NA	NA	NA
KV32S15	120	127	72	64	16	NA	NA	NA
KV32S16	120	127	72	64	16	NA	NA	NA
KV32S20	25	1	31	0	27	0	0	0
KV32S20(CND)	9	1	31	0	27	0	0	0

SONY ID CODES update 10-20-2000

The following are the ID codes used in miscellaneous Sony television receivers. It is the intent to list all Sony ID codes in the event the service manual is not available and the EE-prom has been changed. Without the ID codes you will not be able to set up the television. It will not function correctly, and most likely loose features.

TO ENTER THE SERVICE MODE PRESS THE FOLLOWING BUTTONS ON REMOTE:

On remote control "Press"

DISPLAY

"5"

"VOLUME +"

"POWER"

To WRITE TO EEPROM "Press"

"MUTING"

"ENTER"

To INITIALIZE EEPROM "Press"

"8"

"ENTER"

MODEL	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6	ID-7
KV32S22(CND)	9	17	31	10	27	1	0	0
KV32S22T	9	17	31	10	27	1	0	0
KV32S22U	25	17	31	10	27	1	0	0
KV32S25	25	21	31	0	27	0	1	0
KV32S25(CND)	9	21	31	0	27	0	1	0
KV32S26	25	21	31	10	27	129	1	0
KV32S26(CND)	9	21	31	10	27	129	1	0
KV32S36	25	21	31	10	27	129	6	0
KV32S36(CND)	9	21	31	10	27	129	6	0
KV32S40	89	17	31	10	27	129	0	0
KV32S45	89	21	31	10	27	129	1	0
KV32S65 (CND)	89	21	31	10	27	133	6	0
KV32S65 (CND)	89	21	31	10	155	133	6	0
KV32TS36 (CND)	120	127	8	64	16	NA	NA	NA
KV32TS36 (US)	120	127	72	64	16	NA	NA	NA
KV32TS46 (CND)	120	127	8	36	16	NA	NA	NA
KV32TS46 (US)	120	127	72	36	16	NA	NA	NA
KV32TW26	25	21	31	10	27	129	1	0
KV32TW67	120	120	72	64	16	NA	NA	NA
KV32TW68	120	120	72	64	16	NA	NA	NA
KV32V16	120	127	72	36	19	NA	NA	NA
KV32V26	25	23	47	10	27	135	1	0
KV32V26(CND)	9	23	47	10	27	135	1	0
KV32V36	25	55	47	10	27	159	6	0
KV32V36(CND)	9	55	47	10	27	159	6	0
KV32V40	89	23	175	10	27	129	0	0
KV32V65	89	55	175	10	27	141	6	0
KV32XBR200	89	63	63	0	139	173	38	0
KV32XBR200	89	63	63	0	139	173	38	0
KV32XBR200(CND)	89	63	63	0	139	173	38	0
KV32XBR200(CND)	89	63	63	0	139	173	38	0
KV32XBR250	89	63	175	96	203	181	6	0
KV32XBR250(CND)	89	63	175	112	251	181	6	9
KV32XBR44	120	127	126	52	28	NA	NA	NA
KV32XBR48	25	63	47	0	27	143	6	32
KV32XBR85	120	127	126	52	28	NA	NA	NA
KV34FV15	25	63	175	64	251	181	6	0
KV34FV15C	25	63	175	64	251	181	6	0
KV34FV15K	137	63	175	64	219	181	6	0
KV34FV15T	9	63	175	64	219	181	6	0
KV34FVL1	25	63	47	64	171	173	6	0
KV34FX250C	25	63	175	64	203	181	6	9
KV34L45	25	21	159	74	59	129	1	0

SONY ID CODES update 10-20-2000

The following are the ID codes used in miscellaneous Sony television receivers. It is the intent to list all Sony ID codes in the event the service manual is not available and the EE-prom has been changed. Without the ID codes you will not be able to set up the television. It will not function correctly, and most likely loose features.
TO ENTER THE SERVICE MODE PRESS THE FOLLOWING BUTTONS ON REMOTE:

On remote control "Press"

DISPLAY

"5"

"VOLUME +"

"POWER"

To WRITE TO EEPROM "Press"

"MUTING"

"ENTER"

To INITIALIZE EEPROM "Press"

"8"

"ENTER"

MODEL	ID-0	ID-1	ID-2	ID-3	ID-4	ID-5	ID-6	ID-7
KV34L65	25	55	175	74	59	141	6	0
KV34RS20C	25	1	31	0	27	0	0	0
KV34RS26C	25	21	31	10	27	129	1	0
KV34SL40	25	17	159	74	59	129	0	0
KV34SL40(C)	25	17	159	74	59	129	0	0
KV34SL40(T)	9	17	159	10	27	129	0	0
KV34V36C	25	55	47	10	27	159	6	0
KV34V36K	137	55	47	10	27	159	6	0
KV34VL65(C)	25	55	175	74	59	141	6	0
KV35S26	25	21	31	10	155	145	1	0
KV35S26(CND)	9	21	31	10	155	145	1	0
KV35S36	25	21	31	10	155	145	6	0
KV35S36(CND)	9	21	31	10	155	145	6	0
KV35S40	89	21	31	10	155	129	6	0
KV35S45	89	21	31	10	155	129	1	0
KV35V36(CND)	9	55	47	10	155	159	6	0
KV35V36(U)	25	55	47	10	155	159	6	0
KV35V65	89	55	175	10	155	141	6	0
KV35V76	25	55	47	10	155	159	6	0
KV35XBR48	25	63	47	0	155	143	6	32
KV36FS10	89	63	47	96	203	177	0	9
KV36FS10(CND)	89	63	47	112	203	177	0	0
KV36FV1	89	63	47	0	139	173	6	0
KV36FV1(CND)	89	63	47	0	139	173	6	0
KV36FV15	89	63	175	96	203	181	6	0
KV36FV15(CND)	89	63	175	112	203	181	6	0
KV36FV15K	137	63	175	64	219	181	6	0
KV36XBR250	89	63	175	96	203	181	6	0
KV36XBR250(CND)	89	63	175	112	203	181	6	9
KV37RS26	25	21	31	10	155	145	1	0
KV37SL45	25	21	159	74	187	129	1	0
KV37V36M	25	55	47	10	155	159	6	0
KV37V36T	9	55	47	10	155	159	6	0
KV37VL65	25	55	175	74	187	14	6	0
KV37VL65(C)	25	55	175	74	187	141	6	0
KV37VXBR48	25	63	47	0	155	143	6	32
KV38FX250	25	63	175	64	251	181	6	9
KV38FX250T	9	63	175	64	219	181	6	9
KV38XBR250	25	63	175	64	251	181	6	9