 



To locate a particular point in a track

- To move forward at high speed, keep ►► forward search button pressed and release it at the desired point.
- To move backward at high speed, keep ◀◀ reverse search button pressed and release it at the desired point.
- If the current track is searched over, it will continue to search the next track until the end of the disc is reached. The searching will automatically be stopped. If this happens during playback, the first track of the next numbered disc will be played.

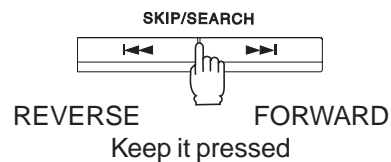


Note:
Searching and skipping can be done during playback or pause stage but are effective for the currently selected disc only. Use DISC SKIP button to choose another disc.

 
REPEAT PLAYBACK DURING PLAYBACK MODE

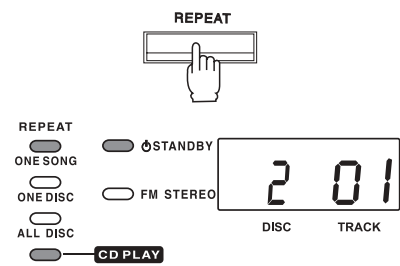

 
To repeat the current track
Press the REPEAT button until ONE SONG indicator lights up and the currently playing track will be played repeatedly until the STOP ■ button is pressed.

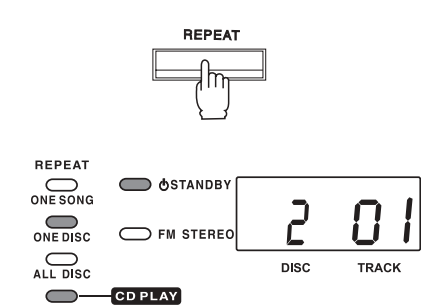

 
To repeat the whole disc
Press the REPEAT button until ONE DISC indicator lights up and the current disc will be played repeatedly starting from the currently playing point.

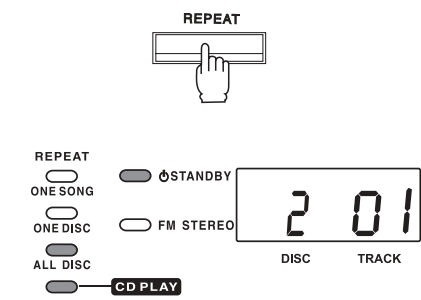

 To repeat all discs
Press the REPEAT button until ALL DISC indicator lights up.

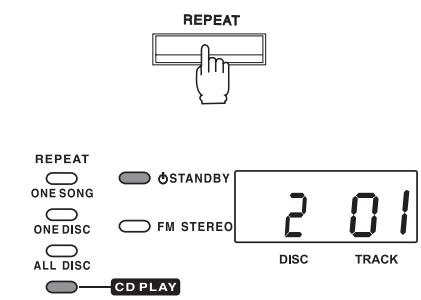

 To cancel repeat play
Press the REPEAT button until all indicators turn off.

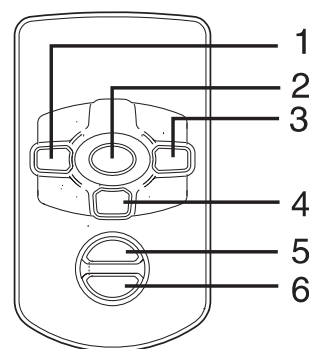




- ◀◀ SKIP/SEARCH button
- REPEAT button
- SKIP/SEARCH button
- DISC SKIP button
- PLAY/PAUSE ►|| button
- STOP ■ button

USING THE REMOTE CONTROL CORRECTLY

- Point the Remote Control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the infrared REMOTE SENSOR may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 4 meters (13 feet).

TO INSTALL BATTERY

   - Take out the PVC sheet before operating the remote control.
- Open the battery door.
- Insert one CR2025 (3V) size battery.

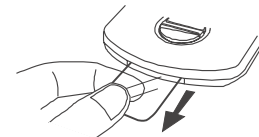



BATTERY REPLACEMENT

When battery becomes weak, the operating distance of the Remote Control is greatly reduced and you will need to replace the battery.

NOTE:



If the Remote Control is not to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.

  CD2155 5 CD HOME STEREO SYSTEM

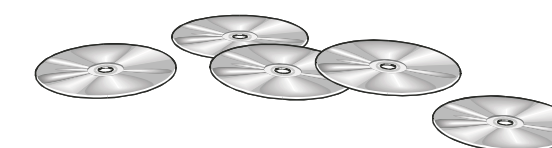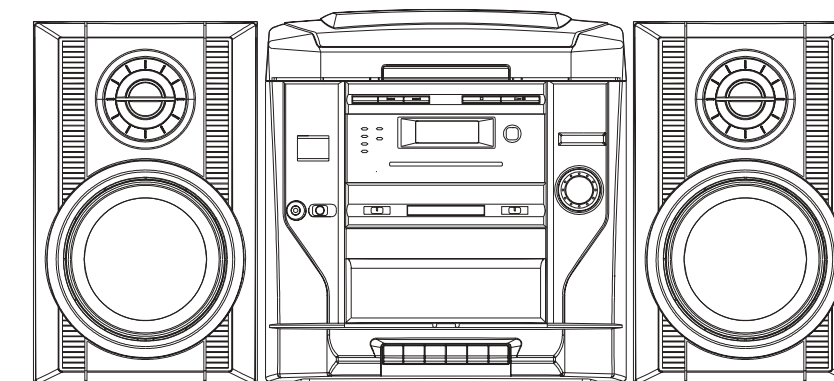

OPERATING INSTRUCTIONS

  - Slide the FUNCTION selector to TAPE.
- Press the STOP/EJECT ■▲ button.
- Insert a cassette tape into the cassette compartment with the exposed side of cassette tape downwards.
- Press the PLAY ► button to begin playback.

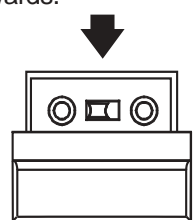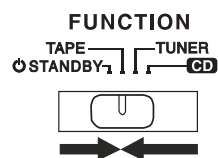

TO STOP PLAYBACK
Press the STOP/EJECT ■▲ button.






TO INTERRUPT PLAYBACK
Press the PAUSE || button.
To resume playing, press the PAUSE || button again.

TO REWIND AND FASTWIND
Press the ◀◀ REWIND or F.FWD ►► button. Press the STOP/EJECT ■▲ button to stop winding at the desired position.


WHEN THE TAPE REACHES ITS END
During fastwind or regular play, the tape will automatically stopped when its end is reached.

USE ONLY NORMAL (TYPE 1) TAPE FOR RECORDING

- Insert a cassette tape into the cassette compartment.
- Press the PAUSE || button.
- Press the RECORD ● button which also engages the PLAY ► button.
- Prepare the source to be recorded and play it.
- Press the PAUSE || button.

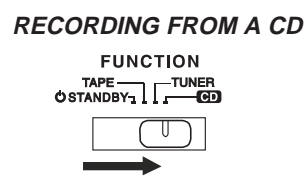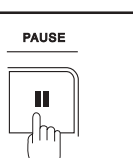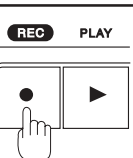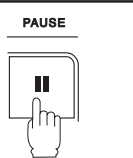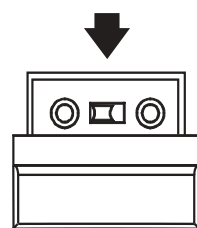     

(Refer to COMPACT DISC PLAYBACK)

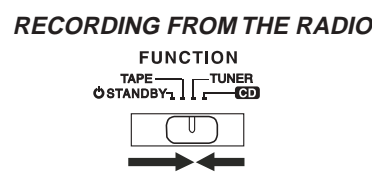 


(Refer to RADIO OPERATION)

TO STOP RECORDING
Press the STOP/EJECT ■▲ button.

TO INTERRUPT RECORDING
Press the PAUSE || button.
To resume recording, press the PAUSE || button again.

TO ERASE A RECORDED TAPE
1) Slide the FUNCTION selector to TAPE.
2) Insert a tape with the side you want to erase facing you.
3) Press the RECORD ● button to start erasing.

PROBLEMS	ITEMS TO CHECK
GENERAL No sound No sound from one channel or unbalance left or right volume Reversed left and right sound	<ul style="list-style-type: none"> Turn VOLUME clockwise. The headphones are connected. Disconnect them. Check the speaker connections of the inoperative channel. Check the speaker cord connection and speaker location.
Lack of bass sound or apparently imprecise physical location of musical instruments Severe hum or noise	<ul style="list-style-type: none"> Check the speaker connection for proper phasing.
CD System does not turn on	<ul style="list-style-type: none"> The TV or VCR is too close to the stereo system. Separate the stereo system from the TV or VCR. Make sure AC power plug is secure in the outlet, and outlet has power. Make sure FUNCTION selector is set to CD. Make sure disc label is facing up. Make sure disc is clean. Pause mode is activated. Disc may be damaged or dirty; check disc. Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.
Disc in place but unit won't play	<ul style="list-style-type: none"> Make sure disc label is facing up. Make sure disc is clean. Pause mode is activated. Disc may be damaged or dirty; check disc. Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.
Disc skips	<ul style="list-style-type: none"> Make sure disc label is facing up. Make sure disc is clean. Pause mode is activated. Disc may be damaged or dirty; check disc. Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.
RADIO Poor FM reception	<ul style="list-style-type: none"> Make sure FM antenna wire is unbound. Electrical interference in your home can cause poor reception. Move the unit away from sources of interference (especially those with motors and transformers). Reposition or turn the main unit for better reception.
Poor AM/MW reception	<ul style="list-style-type: none"> Reposition or turn the main unit for better reception.
TAPE Distorted or noisy recording	<ul style="list-style-type: none"> Tape heads are dirty; clean them. Tape is damaged. Try another tape.
Record button won't depress	<ul style="list-style-type: none"> Tabs on edge of cassette may be missing or broken. If you want to record on that cassette cover the holes with removable tape.

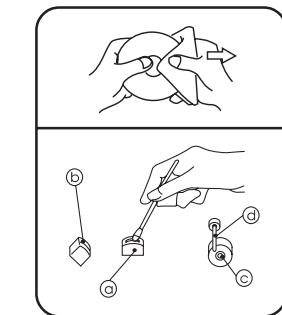 

CLEANING CD
If the CD skips or will not play, the disc may need to be cleaned.
Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.

CLEANING THE TAPE HEADS
To maintain optimum sound quality, clean the playback/recorded heads (a), erasure head (b), pinch roller (c), and capstans (d) regularly (every 10 hours

of use). Use a cotton swab lightly moistened with cleaning fluid or denatured alcohol.

CLEANING THE UNIT
Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.



IMPORTANT NOTE
If an abnormal display indication or an operating problem occurs, disconnect the AC power cord. Wait at least 5 seconds, then reconnect it.
Before transporting the unit, take out all discs from the CD tray.

Power consumption: 10W
Power source: AC 120V-60Hz

Specifications are subject to change without notice.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.


	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 1 -

 PARTS OF LOCATION

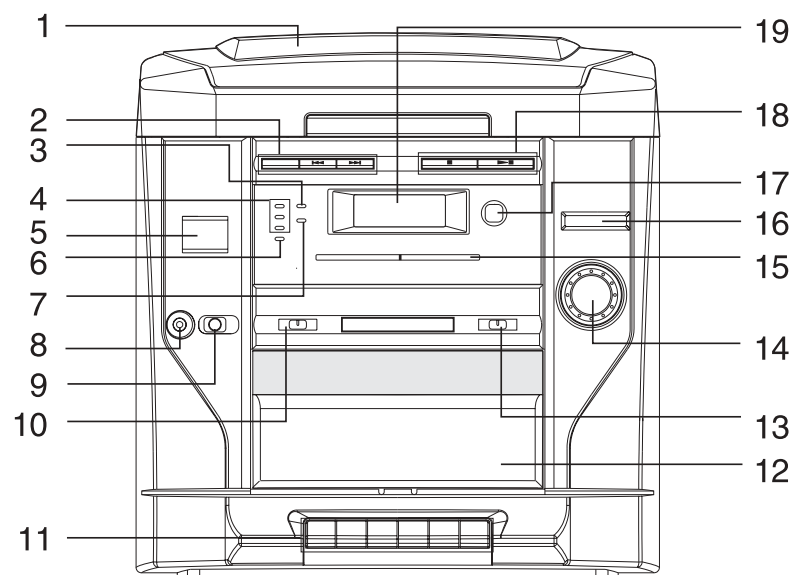


- | | |
|--|---|
| <ol style="list-style-type: none"> 1. CD door 2. REPEAT / SKIP/SEARCH buttons 3. POWER/STANDBY indicator 4. REPEAT indicators (ONE SONG/ONE DISC/ALL DISC) 5. DISC SKIP button 6. CD PLAY indicator 7. FM STEREO indicator 8. PHONES jack 9. FM MODE/BEAT CUT selector (FM STEREO/FM MONO) 10. FUNCTION selector (STANDBY/TAPE/TUNER/CD) | <ol style="list-style-type: none"> 11. Cassette operation controls <ul style="list-style-type: none"> ● REC (record) button ▶ PLAY button ◀◀ REWIND button ▶▶ F.FWD (fast forward) button ■ STOP/EJECT button PAUSE button 12. Cassette compartment 13. BAND selector (AM/FM) 14. VOLUME control 15. Dial scale 16. Tuning control 17. Remote sensor 18. CD STOP / PLAY/PAUSE buttons 19. CD display |
|--|---|

- 5 -

- 10) Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

 CLASS 1 LASER PRODUCT




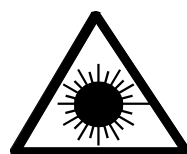


This product contains a low power laser device.


CAUTION
 INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

- 2 -

    RADIO OPERATION
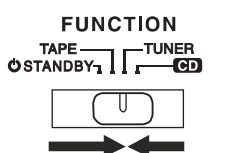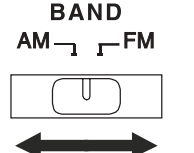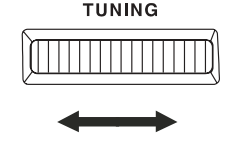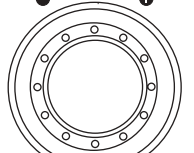
<p>1. Slide the FUNCTION selector to TUNER.</p> 	<p>2. Slide the BAND selector to desired band.</p> 
<p>3. Tune into a station.</p> 	<p>4. Adjust the volume level.</p> 

 FOR BETTER RECEPTION

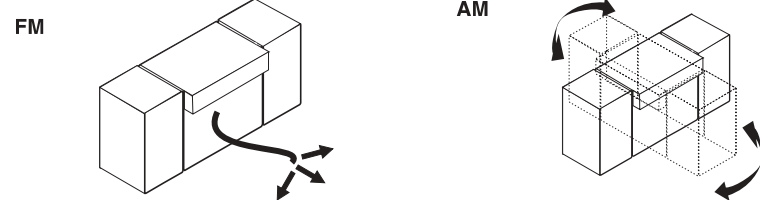

Fully unwind the wire antenna. Then extend the wire antenna and place it in the position that sounds best. Rotate the unit to get the best receiving position.

NOTE: DO NOT CONNECT TO AN OUTSIDE ANTENNA.

TO RECEIVE THE FM BROADCAST IN STEREO

Slide the FM MODE selector to FM STEREO. When the FM stereo broadcast is received. FM STEREO indicator lights up.

IF THE FM BROADCAST SIGNAL IS WEAK

Slide the FM MODE selector to MONO position to turn off the FM STEREO indicator and background noises become monaural.

AFTER LISTENING

Slide the FUNCTION selector to STANDBY.

- 6 -

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

FCC INFORMATION (For USA only)

 
 
 
 

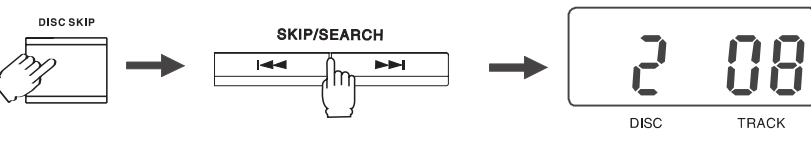 
This device complies with Part 15 of FCC Rules. Operations are subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesirable operations.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.

- 3 -

COMPACT DISC PLAYBACK

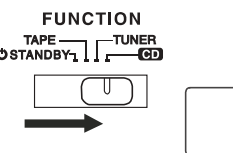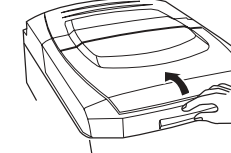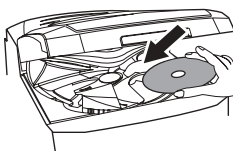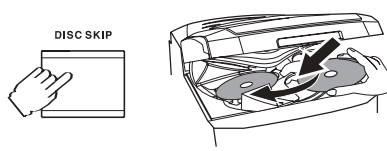
<p>1. Slide the FUNCTION selector to CD.</p> 	<p>2. Open the disc compartment.</p> 
<p>3. Place a disc onto the disc(s) holder, with the label side up.</p> <p>Caution: The unit can play 5 inch (12cm) only.</p> 	<p>4. Press the DISC SKIP button to revolve the tray clockwise. Place other disc(s) on the disc holder(s).</p> 
<p>5. Close the CD door by holding down on its center until secure. The total number of tracks will show in the CD display for a few seconds.</p> 	
<p>6. Press the DISC SKIP button to select the desired disc. Press either one of the SKIP/SEARCH buttons to select the desired track.</p> 	

- 7 -

SYSTEM CONNECTIONS

1. SPEAKERS CONNECTING

 
Connect the wires to the speaker terminals in correct position.
Note: Connecting speakers other than the speakers supplied with the unit, may damage the unit.

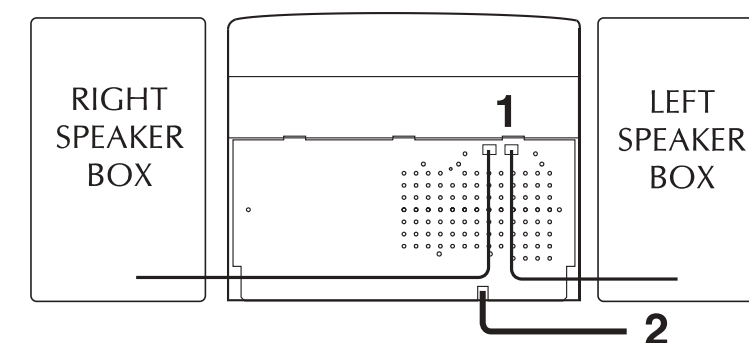

2. AC POWER CONNECTING


Before use, check that the rated voltage of your unit matches your local voltage. Make sure both speakers are connected correctly before plugging the AC power cord into an AC outlet.

 Caution: To prevent electrical shock, wide blade of plug to wide slot, fully insert. (For USA and Canada)

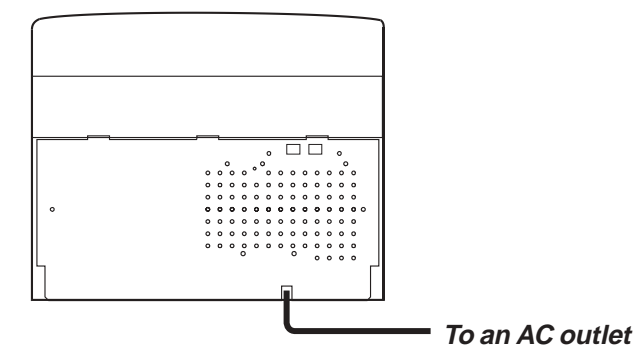

- 4 -

 7. Press the PLAY/PAUSE button to start playback. The CD PLAY indicator lights up.

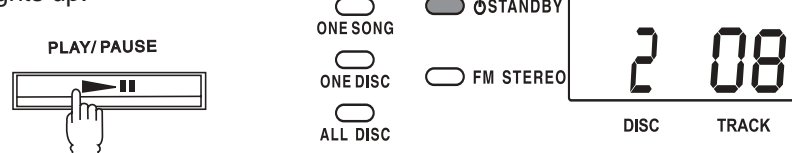

To stop playing:

- (a) For a moment only, press PLAY/PAUSE button and the track no. will flash. Press this button again to resume playing.
- (b) Press the STOP button.

Note:

 
The SKIP/SEARCH buttons can only be used to choose a track of the current disc.

To choose a track of another disc, DISC SKIP button should be pressed to get to the desired disc first.

LOCATING A PARTICULAR POINT IN A TRACK

To locate a track in sequence

- To locate the beginning of the current or the preceding track, press REVERSE skip button.
- To locate the beginning of the succeeding track, press FORWARD skip button.
- A short period of time will be needed for the disc to read the information of the desired track before playback can be done.

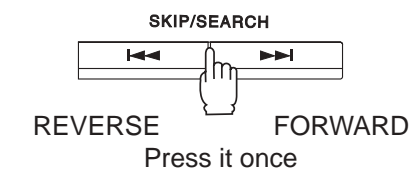

- 8 -