



WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 1 -

- 10) Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

**CLASS 1
LASER
PRODUCT**



This product contains a low power laser device.

**CAUTION
INVISIBLE LASER RADIATION WHEN
OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM.**

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create a hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

- 2 -

FCC INFORMATION (For USA only)

This device complies with Part 15 of FCC Rules. Operations are subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesirable operations.

Complies with the Canadian ICES-003 class B specification.

 
Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.

SYSTEM CONNECTIONS

1. SPEAKERS CONNECTING

Connect the wires to the speaker terminals in correct position.


Note: Connecting speakers other than the speakers supplied with the unit, may damage the unit.

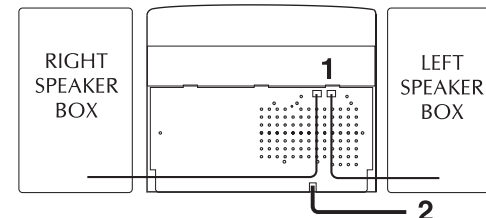

2. AC POWER CONNECTING

Before use, check that the rated voltage of your unit matches your local voltage. Make sure both speakers are connected correctly before plugging the AC power cord into an AC outlet.

 
Caution: To prevent electrical shock, wide blade of plug to wide slot, fully insert. (For USA and Canada)

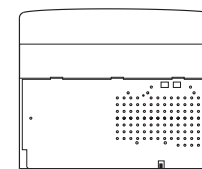

To an AC outlet

- 3 -

 PARTS OF LOCATION

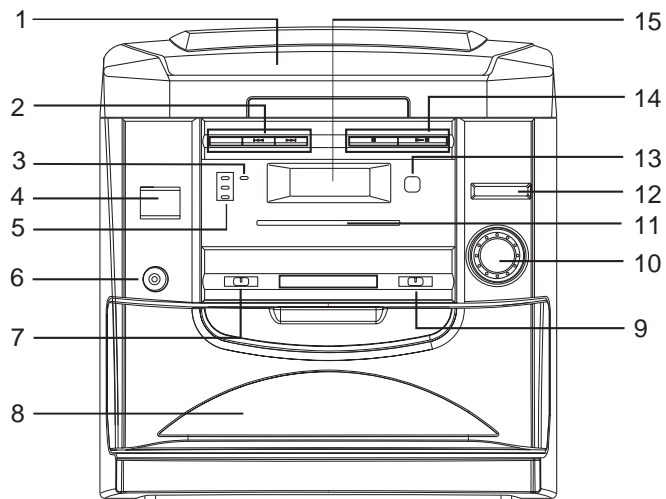


- | | |
|---|------------------------------------|
| 1. CD door | 8. CD storage door |
| 2. REPEAT/◀◀ SKIP/SEARCH ▶▶ buttons | 9. BAND selector (AM/FM) |
| 3. POWER indicator | 10. VOLUME control |
| 4. DISC SKIP button | 11. Dial scale |
| 5. REPEAT indicators (ONE SONG/ONE DISC/ALL DISC) | 12. TUNING control |
| 6. PHONES jack | 13. Remote sensor |
| 7. FUNCTION selector (⏻ STANDBY/TUNER/CD) | 14. CD STOP■/PLAY/PAUSE ▶▶ buttons |
| | 15. CD display |


- 4 -

RADIO OPERATION

 
1. Slide the FUNCTION selector to TUNER. The POWER indicator lights up.

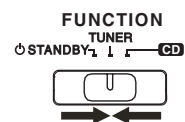

 
2. Slide the BAND selector to desired band.

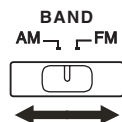

 
3. Tune into a station.



 
4. Adjust the volume level.

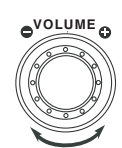

FOR BETTER RECEPTION

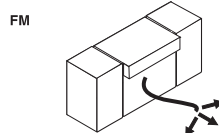 

 Fully unwind the wire antenna. Then extend the wire antenna and place it in the position that sounds best. (When the FM broadcast signal is fine, it can receive FM Stereo Broadcast.)

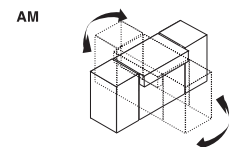

Rotate the unit to get the best receiving position.

NOTE: DO NOT CONNECT TO AN OUTSIDE ANTENNA.

 
AFTER LISTENING

Slide the FUNCTION selector to ⏻ STANDBY.

- 5 -

COMPACT DISC PLAYBACK


1. Slide the FUNCTION selector to CD. The POWER indicator lights up.

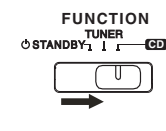


2. Open the disc compartment.



 
3. Place a disc onto the disc(s) holder, with the label side up.

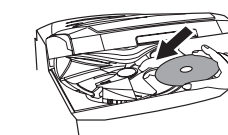

 4. Press the DISC SKIP button to revolve the tray clockwise. Place other disc(s) on the disc holder(s).



 5. Close the CD door by holding down on its center until secure. The total number of tracks will show in the CD display for a few seconds.

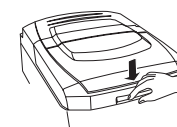

6. Press the DISC SKIP button to select the desired disc. Press either one of the ◀◀ SKIP/SEARCH ▶▶ buttons to select the desired track.




 
- 6 -



COMPACT DISC PLAYBACK (continued)

7. Press the PLAY/PAUSE  button to start playback.





To stop playing:

  
- For a moment only, press PLAY/PAUSE  button and the track no. will flash. Press this button again to resume playing.
- Press the STOP  button.

   Note:
The  SKIP/SEARCH  buttons can only be used to choose a track of the current disc. To choose a track of another disc, DISC SKIP button should be pressed to get to the desired disc first.


 
LOCATING A PARTICULAR POINT IN A TRACK

To locate a track in sequence

- To locate the beginning of the current or the preceding track, press  reverse skip button.
- To locate the beginning of the succeeding track, press  forward skip button.
- A short period of time will be needed for the disc to read the information of the desired track before playback can be done.



To locate a particular point in a track

 
- To move forward at high speed, keep  forward search button pressed and release it at the desired point.
- To move backward at high speed, keep  reverse search button pressed and release it at the desired point.
- If the current track is searched over, it will continue to search the next track until the end of the disc is reached. The searching will automatically be stopped. If this happens during playback, the first track of the next numbered disc will be played.

 

 


Note:
Searching and skipping can be done during playback or pause stage but are effective for the currently selected disc only. Use DISC SKIP button to choose another disc.

- 7 -

REMOTE CONTROL

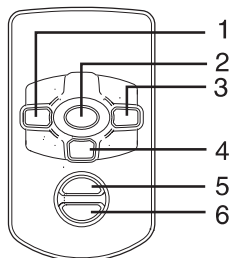

-  SKIP/SEARCH button
- REPEAT button
-  SKIP/SEARCH button
- DISC SKIP button
- PLAY/PAUSE  button
- STOP  button

USING THE REMOTE CONTROL CORRECTLY

- Point the Remote Control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the infrared REMOTE SENSOR may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 4 meters (13 feet).

- Remove the protective plastic tab before operating the remote control.

- To change battery

- Open the battery door.



- Insert one CR2025 (3V) size battery.



BATTERY REPLACEMENT

When battery becomes weak, the operating distance of the Remote Control is greatly reduced and you will need to replace the battery.


NOTE:
If the Remote Control is not to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.

 
WARNING: Do not dispose of battery in fire, battery may explode or leak.

- 9 -

REPEAT PLAYBACK DURING PLAYBACK MODE


To repeat the current track

- Press the REPEAT button until ONE SONG indicator lights up and the currently playing track will be played repeatedly until the STOP  button is pressed.




To repeat the whole disc

 - Press the REPEAT button until ONE DISC indicator lights up and the current disc will be played repeatedly starting from the currently playing point.



To repeat all discs

 - Press the REPEAT button until ALL DISC indicator lights up.



To cancel repeat play

- Press the REPEAT button until all indicators turn off.



USING THE CD STORAGE

- Open the CD storage door and put CD into the CD storage, maximum six CDs.



- 8 -

TROUBLE SHOOTING GUIDE

PROBLEMS GENERAL

No sound

No sound from one channel or unbalance left a right volume
Reversed left and right sound

Lack of bass sound or apparently imprecise physical location of musical instruments
Severe hum or noise

ITEMS TO CHECK

- Turn VOLUME clockwise.
- The headphones are connected. Disconnect them.
- Check the speaker connections of the inoperative channel.
- Check the speaker cord connection and speaker location.
- Check the speaker connection for proper phasing.
- The TV or VCR is too close to the stereo system. Separate the stereo system from the TV or VCR.

CD

Disc in place but unit won't play

Disc skips

- Make sure AC power plug is secure in the outlet, and outlet has power.
- Make sure FUNCTION selector is set to CD.
- Make sure disc label is facing up.
- Make sure disc is clean.
- Pause mode is activated.
- Disc may be damaged or dirty; check disc.
- Make sure the unit is on a secure spot. Vibration or jarring can cause the disc to skip.

RADIO

 
 
Poor FM reception

Poor AM/MW reception

- Make sure FM antenna wire is unwound.
- Electrical interference in your home can cause poor reception. Move the unit away from sources of interference (especially those with motors and transformers).
- Reposition or turn the main unit for better reception.

5 CD HOME STEREO SYSTEM

COMPACT
disc
DIGITAL AUDIO

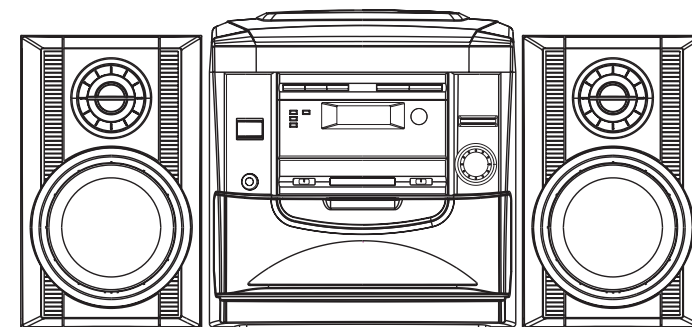

OPERATING INSTRUCTIONS

MAINTENANCE



CLEANING CD

If the CD skips or will not play, the disc may need to be cleaned. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.

CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

IMPORTANT NOTE

- If an abnormal display indication or an operating problem occurs, disconnect the AC power cord. Wait at least 5 seconds, then reconnect it.
- Before transporting the unit, take out all discs from the CD tray.

SPECIFICATIONS

Power consumption: 15W
Power source: AC 120V 60Hz

Specifications are subject to change without notice.