

**DURABRAND**

**5-CD STEREO SYSTEM  
WITH SUBWOOFER**



COMPACT  
**disc**  
DIGITAL AUDIO



**Model : CD2775SW  
OPERATING INSTRUCTION**

## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p><b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p><b>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

## IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinch particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) This appliance shall not be exposed to dripping or splashing water and that no object filled with liquid such as vases shall be placed on the apparatus.

## PRECAUTION

Follow the advice below for safe and appropriate operation.

### ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow through the ventilation slots by placing the unit on soft furnishings, by covering the unit with a cloth or by placing the unit on a carpet.

### ON AC VOLTAGE

- Before using the unit, check that the rated voltage of your unit matches your local voltage.

### ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

### ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand in a heated room for 1 to 2 hours to allow the condensation to dry out.

### FCC INFORMATION (For USA only)

This device complies with Part 15 of FCC Rules. Operations are subject to the following two conditions:

 
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesirable operations.

**Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.**

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT  
APPAREIL À LASER DE CLASSE 1  
PRODUCTO LASER DE CLASE 1  
CLASSE 1 PRODOTTO LASER

**CAUTION**  
INVISIBLE LASER RADIATION WHEN  
OPEN AND INTERLOCKS DEFEATED.  
AVOID EXPOSURE TO BEAM




This product contains a low power laser device.

## SYSTEM CONNECTIONS
 
### IMPORTANT

Switch off the power before connecting speakers and other equipment.

### SPEAKERS TERMINALS IMPEDANCE:

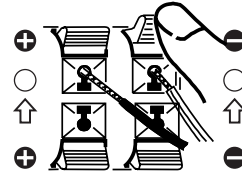

### SPEAKER CORD CONNECTION

Connect the black wires to the black (-) terminals and the other color (white, red & brown) to the red (+) terminals.

**NOTE:** Connecting speakers other than the speakers supplied with the unit, may damage the unit.

### POWER CORD CONNECTION

1. Make sure that all the components and speakers are connected correctly.
2. Check that the rated voltage of your unit matches your local voltage.

#### CAUTION

To prevent electrical shock, match wide blade of plug to wide slot, fully insert. (For USA and CANADA only)

 
#### CAUTION

- Be sure the AC power cord is disconnected and all functions are off before making connections.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

### SPEAKER AND SUBWOOFER CONNECTIONS

Connect Speaker wires (Left & Right) from the Speaker & Subwoofer to the amplifier's Speaker Left/Right & Subwoofer.

**NOTE:** Ensure in each case that the striped (+) wire is connected to the (+) terminal of the speaker output and the non-striped wire (-) is connected to the (-) terminal of the speaker output. Also ensure that the correct orientation for left and right main speakers is observed.

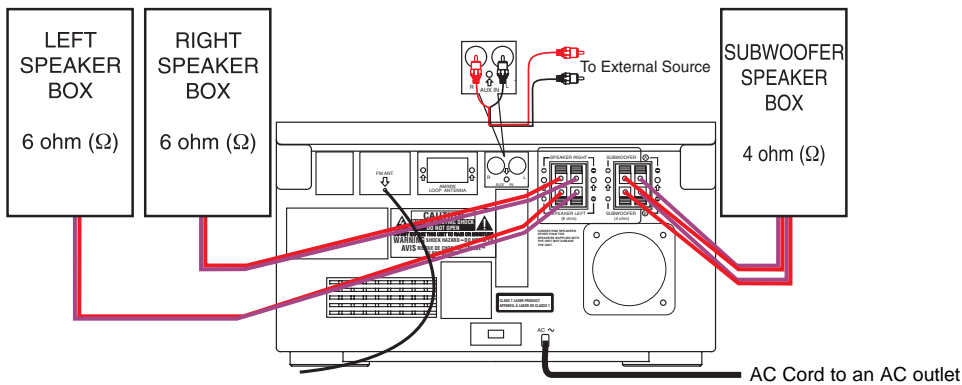

### CONNECTION WITH OTHER OPTIONAL EQUIPMENT

To listen to or record audio signals from external units through this unit:

Connect the white plug to the L jack, and the red plug to the R jack to the AUX IN connector.

### LISTENING TO THE CONNECTED EQUIPMENT

1. Press the FUNCTION button to AUX.
2. Play the external source.

**NOTE:** If the external equipment is a television and this audio system is close to it, you may experience interference if the tuner function is selected while the television is working.

 
### TO TURN ON THE UNIT

Press the POWER button. The display will light up. Select the desired function and the corresponding function indicator will light up.

### AFTER USE


Press the POWER button. The display light will fade and only the clock display will be shown.

## PARTS IDENTIFICATIONS

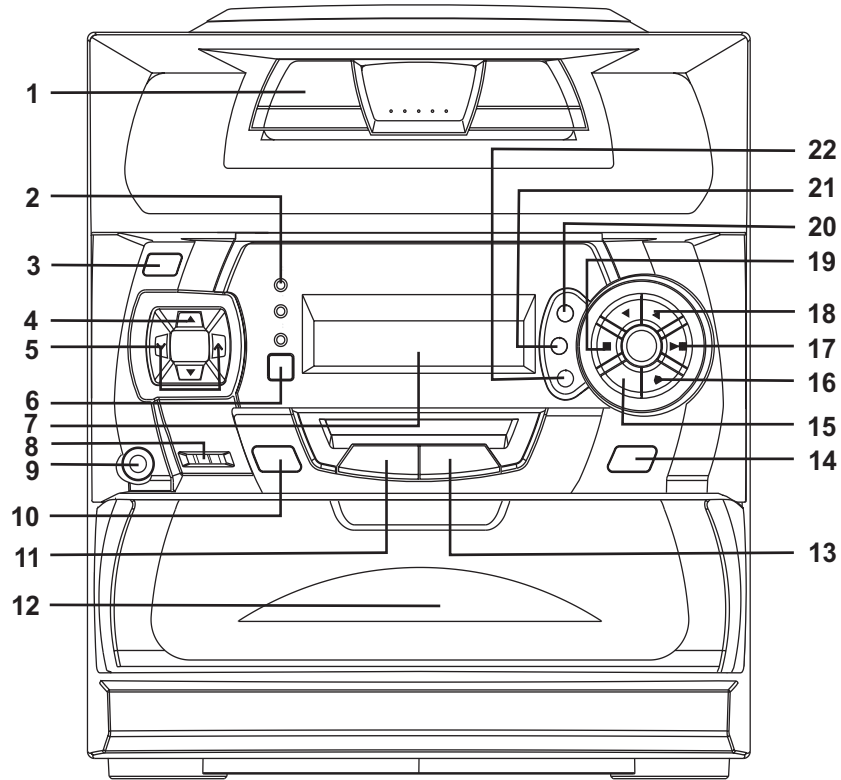

- |  |                                |
|--|--------------------------------|
| 1) CD door                             | 12) CD storage                 |
| 2) STEREO WIDE indicator               | 13) STEREO WIDE button         |
| 3) POWER / ⏻ STANDBY button            | 14) BAND button                |
| 4) VOLUME control buttons              | 15) DISC SKIP button           |
| 5) RANDOM / TUNING / REPEAT buttons    | 16) ▲ OPEN / CLOSE button      |
| 6) REMOTE SENSOR                       | 17) ▶   PLAY / PAUSE button    |
| 7) DISPLAY window                      | 18) SKIP/SEARCH/PRESET buttons |
| 8) FM MODE (STEREO / MONO)             | 19) ■ STOP button              |
| 9) PHONES jack                         | 20) MEMORY / ⌚ CLOCK button    |
| 10) FUNCTION button (TUNER / CD / AUX) | 21) SLEEP button               |
| 11) X-BASS WOOFER button               | 22) TIMER button               |

## DISPLAY

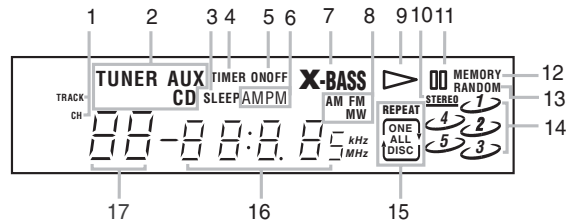 


1. TRACK and CHANNEL indicators.
2. FUNCTION indicators.
3. SLEEP indicator.
4. TIMER indicator.
5. ON/OFF indicators.
6. AM/PM indicators.
7. X-Bass indicator.
8. Band FM/MW(AM) indicators.
9. Playback Indicator.
10. STEREO indicator
11. Pause indicator.
12. MEMORY indicator.
13. RANDOM indicator.
14. Indicators to show which disc holder of the disc tray is occupied. If a certain disc holder is empty, the corresponding number indicator will be off.
15. REPEAT mode indicators.
16. CLOCK/CD TIMING/BROADCAST STATION display.
17. Track number.

### POWER INDICATOR

 While the AC cord is connected and the unit is on stand-by, power will be consumed and only the clock display will be lit.



- Press the POWER/STANDBY button to turn on the unit.

After a short period of time the display will show: will resume the same mode as you power off the unit last time for example





- Press FUNCTION button to CD

  After a short period of time the display will show:



- Press the FUNCTION button to AUX

  A short period of time is needed for track shuffling, and the display will show:



- The numbers showing in the display depend on the time, the selected frequency or the compact disc. CD numbers will only be displayed if a compact.


## ADJUSTING THE SOUND
 
### TO ADJUST THE VOLUME

Press the VOLUME ▲ / ▼ buttons to adjust the sound.


To increase the volume press here.

To decrease the volume press here.

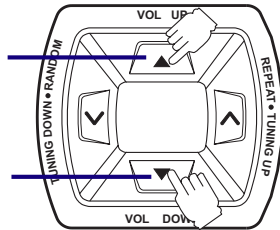


### TO USE THE X-BASS WOOFER


 
Press the X-BASS WOOFER button to adjust the bass.

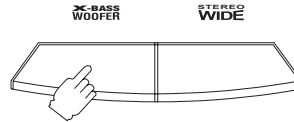

The display will show:

 

  X-BASS is designed specifically to boost the low frequency sound to obtain a more powerful bass.

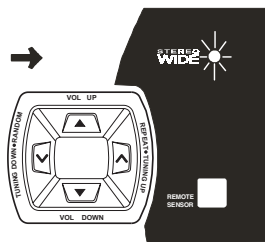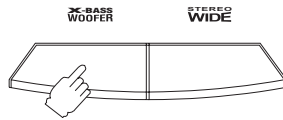

STEREO WIDE creates the feeling that the sound is being spread to the left and right, beyond the actual position of the speakers. When listening to the sound in stereo, press the STEREO WIDE button to get more dynamic sound.

### FOR PERSONAL LISTENING

Connect headphones (ø 3.5mm stereo mini plug) to the PHONES jack.

Adjust the VOLUME control, X-BASS WOOFER and STEREO WIDE controls for the desired listening level. When headphones are connected, the speakers are automatically disconnected.

### WHEN RECORDING

 
The VOLUME, X-BASS WOOFER and STEREO WIDE controls switch on may be adjusted with no effect on the recorded signal.

### BUILT-IN SUBWOOFER SYSTEM



The built-in subwoofer system has a separate subwoofer cavity area that is part of the loudspeaker cabinet structure, which acts as a sonic filter to cut distortion components. This separate construction gives a clear, rich definition to bass reproduction and it can realize clear, well-defined mid-to-high frequency signals.

## SETTING THE CLOCK


### To set the current time (Select POWER STANDBY mode)

   1. Press the MEMORY/  CLOCK button in clock mode. Hours flash.


 
 


2. Press the  /  (SKIP) button repeatedly to set current hour.



3. Press the MEMORY/  CLOCK button to make the correct minutes flash.




4. Press the  /  (SKIP) buttons to set the minutes and press MEMORY/  CLOCK button to start the clock.





### To set the timer on (time to turn on)

 1. Press the POWER/STANDBY button to turn ON the unit.



  2. Press the  STOP button until the "TIMER ON" indicator shows on the display (tuner, AUX or CD stop modes).



3. Press the MEMORY/  CLOCK button in clock mode.


repeat the steps of the setting the current time


4. Press the POWER/STANDBY button to turn OFF the unit.





### To set the timer off (time to turn off)

  1. Press the POWER/STANDBY button to turn ON the unit.



  
2. Press the  STOP button until the "TIMER OFF" indicator shows on the display (tuner, AUX or CD stop modes).




3. Press the MEMORY/  CLOCK button in clock mode.

repeat the steps of the setting of current time

 4. Press the POWER/STANDBY button to turn OFF the unit.




- NOTE:**
- 1) Press the  STOP button to view the local time, time to turn on and time to turn off step by step, the previous display will be retrieved after around 4 seconds.
  - 2) The timer will work if the TIMER key is pressed so that "TIMER" lights up in the display. Cancel the timer by pressing the key so that "TIMER" goes out.
  - 3) Suddenly OFF when playing, the TIMER OFF function are activated. Press the STOP button until the 'TIMER OFF' indicator show on the display.




## SETTING THE SLEEP TIMER

 1. Press the SLEEP button while the power is on.  
"SLEEP 90" lights in the display.



 2. Press and hold the SLEEP button to select the length of remaining time until the unit turns off.  
It changes the indicator in the following way:




The Sleep Timer is set and the SLEEP indicator lights in the display. Let go when required sleep time (in minutes) is shown.

To cancel the sleep timer, press the SLEEP button until the "SLEEP" will go out in the display.

## FOR BETTER RECEPTION

 FM

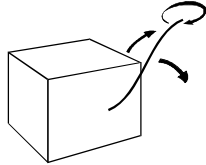

Fully unwind the wire antenna. Then extend the wire antenna and place it in the position that sounds best.

**NOTE:** Do not connect to outside antenna.

AMMW




Connect the loop aerial (provided) to the 'AM/MW LOOP ANTENNA' snap terminals at the back of the unit. Position the aerial for the best reception.


## MANUAL TUNING

 The system can store a total of 40 stations. (Each band has a maximum of 20 available preset stations). Presetting allows you to tune into a station directly. Stations are assigned preset numbers, beginning from 1 in consecutive order for each band (AM/MW and FM).


1. Press the FUNCTION button to TUNER, the "TUNER" appears on the display.



 2. Press the BAND button to select the desired band.

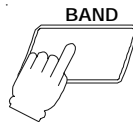

 3. Tune into a station. "STEREO" will appear when an FM broadcast is in stereo.

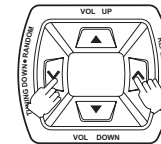

### TO RECEIVE THE FM BROADCAST IN STEREO

Set the MODE selector to FM STEREO.

When the FM stereo broadcast is received, FM STEREO indicator lights up.

### IF THE FM STEREO BROADCAST SIGNAL IS WEAK

Set the MODE selector to FM MONO.

Background noise will be reduced but the signal reproduced will be mono.

### TO SEARCH FOR A STATION QUICKLY

Hold the TUNING UP or DOWN button and station searching starts automatically. When a station is found, searching stops automatically.

However, it may not stop if the signal is weak. In this case, search for the station manually.

**Note:**

 
The last station tuned in will be recalled, even after changing the tuning band or the function, or after turning the power off.

### After use:


Press the POWER button to STANDBY.

## PRESET TUNING


1. Press the FUNCTION button to TUNER.



 2. Press the BAND button to select a band.

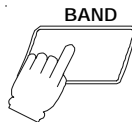

 3. Tune into a station.

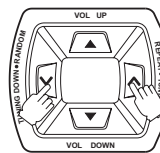

4. Press the MEMORY/ CLOCK button.




### Notes:

 
- When the total memory of current band is full and try to store the current station into memory, the message "FULL" will display for a few second.
- When the station in the preset memory, it can not store that station again.

## TUNING INTO A PRESET STATION

1. Press the FUNCTION button to TUNER.



 2. Press the BAND button to select the a band.

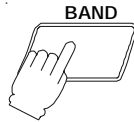


3. Press the PRESET buttons to preset number.




The contents (preset channel number, frequency and frequency band) which have been stored in memory will appear on the display in numerical order, irrespective of the frequency bands.

## COMPACT DISC PLAYBACK

 1. Press the FUNCTION button to CD.

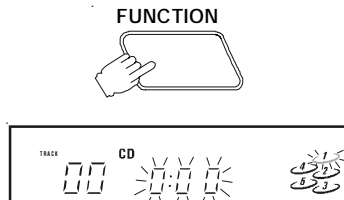

 
2. Press the OPEN/CLOSE button to open the disc tray.

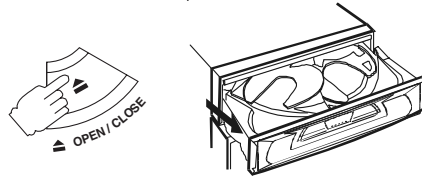


3. Place the first disc onto the disc holder, with the label side up.

**WARNING:**

 
- Before transporting the unit, take out all discs from CD tray.

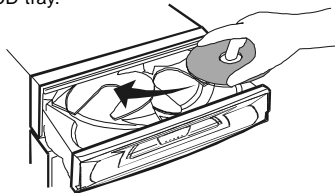

 4. Press the DISC SKIP button to revolve the tray clockwise. Place other disc(s) on the disc holder(s).

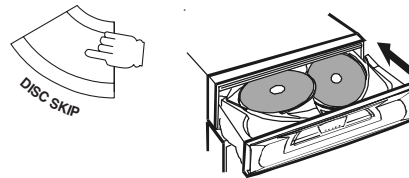

 5. Press the OPEN/CLOSE button to close the tray. It takes a short while for your player to check the discs.

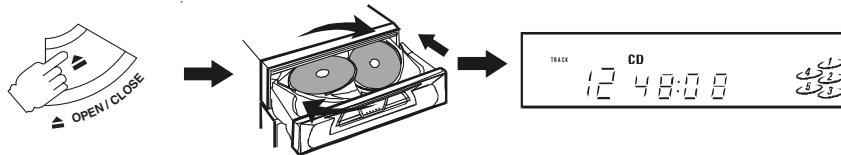

6. Press the DISC SKIP button to select the desired disc. Press either one of the ▼ / ▲ (SKIP) buttons to select the desired track. The selected disc symbol will flash.

The selected disc symbol will flash.



7. Press the PLAY/PAUSE button to start playback.



8. To stop playing:

- for a moment only, press **PLAY/PAUSE** button and '||' will be displayed. Press this button again to resume playing.
- Press the **STOP** button.

## COMPACT DISC PLAYBACK (CONTINUED)

- Notes:**
1. During playback, disc tray can be opened to change/add disc, but DISC SKIP button will become invalid and the current disc playback will not be interrupted.
  2. The ▼ / ▲ SKIP buttons can only be used to choose a track of the current disc. To choose a track of another disc, DISC SKIP button should be pressed to get to the desired disc first.
  3. Before transporting the unit, take out all discs from the CD tray.

### LOCATING A PARTICULAR POINT IN A TRACK

#### To Locate a Track in Sequence

- To locate the beginning of the current or the preceding track, press ▼ reverse SKIP button.
- To locate the beginning of the succeeding track, press ▲ forward SKIP button.
- A short period of time will be needed for the disc to read the information of the desired track before playback can begin.

#### To Locate a Particular Point in a Track

- To move forward at high speed, keep ▲ forward SEARCH button pressed and release it at the desired point.
- To move backward at high speed, keep ▼ backward SEARCH button pressed and release it at the desired point.
- On forward search the track is rapidly scanned, then the next track and so on to the next disc. The first track on the next disc will be played normally, to carry on scanning release and press the SEARCH button.

Reverse  
skip

Forward  
skip



Press it once

Reverse  
search

Forward  
search



 
Keep it pressed

- Note:** Searching and skipping can be done during playback or pause stage but are effective for the currently selected disc only.  
Use DISC SKIP button to choose another disc.

## COMPACT DISC PLAYBACK (CONTINUED)

### SHUFFLE PLAY - PLAYING IN A RANDOM ORDER IN STOP MODE


1. Press the DISC SKIP button to select a disc.

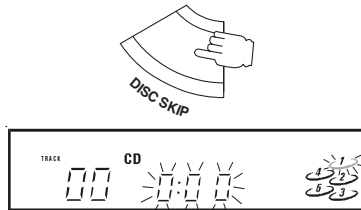

2. Press the RANDOM button, the word "RANDOM" will appear on the display.



3. Press ►|| PLAY/PAUSE button. Some abnormal symbols will be shown on the display and a short period of time is needed for track shuffling, before playback can be started.

 


- Notes:**
1. The random function shuffles all the tracks (**maximum 48 tracks**) of all discs in the disc tray and randomly selects one track to play each time.
  2. The player will skip to a new randomly selected track and start playing if ▼ SKIP button is pressed during random playback.

### IN PLAYBACK MODE

 During normal playback the random function cannot be activated, it can only be switched "ON" from the STOP mode.

### To cancel random playback

1. Press the ■ STOP button to stop random playing.



2. Press the RANDOM button to deactivate random playback.




**Notes:**

 During random playback, the RANDOM playback function cannot be cancelled. Random play cancellation can only be done in stop mode.


## COMPACT DISC PLAYBACK (CONTINUED)

### REPEAT PLAYBACK DURING PLAYBACK MODE




#### To Repeat the Current Track

 - Press the REPEAT button until REPEAT ONE appears on the display and the currently playing track will be played repeatedly until the STOP button is pressed.
- SKIP and SEARCH can still be used during this function. SKIP will go to the start of the next track, Reverse Skip will go to the start of the present track, on the second press it will then go to the start of the previous track. SEARCH will search through the tracks normally.




#### To Repeat the Whole Disc

 - Press the REPEAT button until REPEAT ONE DISC appears on the display and the current disc will be played repeatedly starting from the currently playing point.
- Press the ▼ / ▲ SKIP buttons with repeat-one-disc function on, one can still search through the whole disc, and the CD player will then start playing from the selected point.



#### To Repeat All Disc

 - Press the REPEAT button until REPEAT ALL DISC appears on the display.
- Press the ▼ / ▲ SKIP buttons can make the player start playing from the newly selected point of the currently playing disc.
- Press DISC SKIP button can make the player start playing from the first track of the newly selected disc. The ▼ / ▲ SKIP buttons can be used to choose a particular track on this selected disc, the CD player will then start playing from that point.



#### To Cancel Repeat Play

- Press the REPEAT button until the word "REPEAT" disappears from the display.

### DURING STOP MODE

The REPEAT operations can also be done in the stop mode. The player will start playing from Track 1 of the currently selected disc after ■ PLAY/PAUSE button is pressed.



### DURING PAUSE MODE

 
The REPEAT operations can be done from the pausing point. The player will start playing again after ■ PLAY/PAUSE button is pressed.




## COMPACT DISC PROGRAMMED PLAYBACK

A program of up to 32 tracks from all the available discs in the disc tray can be played in a preset order.


1. Press the MEMORY/CLOCK button (in stop mode).



 
2. Press the DISC SKIP button to select the desired disc (the disc symbol (↩) shows which disc is selected).



 3. Press the ▼ / ▲ SKIP buttons to select the desired track.



 4. Press the MEMORY/CLOCK button again to store this track in memory.



5. To add additional tracks,

**Repeat steps 2 to 4.**

6. To start playback, press the PLAY/PAUSE button.



- NOTE:** 1. The same track can be selected more than once in the same program.  
 2. With program on, the ▼ / ▲ SKIP buttons function can only be used for the selected tracks.  
 3. With program on, repeat play cannot be done for ALL DISCS.

### TO CHECK THE PROGRAM

 
After setting the program, press the MEMORY/CLOCK button repeatedly to check the order. This will not work when the disc is playing.



## STOPPING AND CANCELLING PROGRAMMED PLAYBACK

### To stop programmed play for a moment:

- Press the **PLAY/PAUSE** button and "||" will be displayed. Press this button again to resume playing.

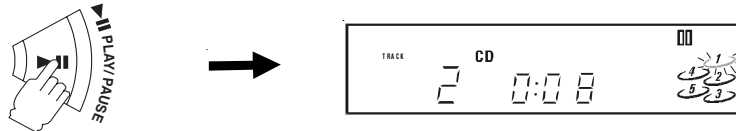

### To add additional tracks during program playback:

- Press the **STOP** button once, press the **MEMORY/CLOCK** button until the track indication is "--" and then repeat steps 2 to 4 (Compact Disc Programmed Playback) on page 17.



 
### To erase the whole program:

- Press the **STOP** until the word "MEMORY" disappears from the display. The display will then show the information of the current disc.



### Also


By pressing the **FUNCTION** button to select other functions.



or  
Open the disc tray by pressing the **OPEN/CLOSE** button.



## REMOTE CONTROL

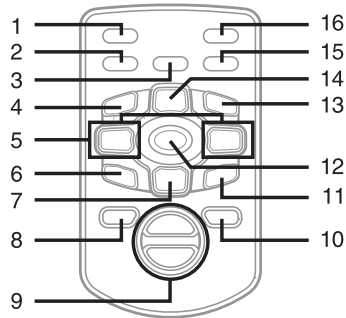 

1. POWER/STANDBY button
2. SOUND button
3. TIMER button
4. STOP button
5. ⏮/⏭ SKIP buttons / PRESET +/- buttons
6. MEM Ⓞ button
7. TUNING ▼/RANDOM button
8. SLEEP button
9. VOLUME +/- buttons
10. FUNCTION button
11. BAND button
12. X-BASS button
13. PLAY/PAUSE button
14. TUNING ▲/REPEAT buttons
15. ▲ OPEN/CLOSE button
16. DISC SKIP button

### USING THE REMOTE CONTROL CORRECTLY

- Point the Remote Control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the infrared REMOTE SENSOR may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 6 metres (19 feet).

### TO CHANGE REMOTE BATTERY

1. Open the battery door.



2. Insert one CR2025 (3V) size battery.



#### ATTENTION

Take out the PVC sheet before operating the Remote Control.



 
### BATTERY REPLACEMENT

When batteries become weak, the operating distance of the Remote Control is greatly reduced and you will need to replace the batteries.

#### NOTE:

If the Remote Control is not to be used for a long time, remove the battery to avoid damage caused by battery leakage corrosion.

## MAINTENANCE

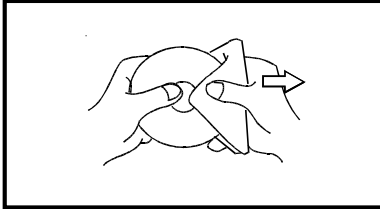

### CLEANING CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.

### CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

### IMPORTANT NOTE

Before transporting the unit, take out all discs from the CD tray.

## TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE (AND REMEDY)
<b>GENERAL</b>	
No sound.	<ul style="list-style-type: none"> <li>• Press the VOLUME UP button.</li> <li>• The headphones are connected. Disconnect them.</li> <li>• Reset the unit by pressing the Power/Standby switch.</li> <li>• Suddenly OFF when playing, the TIMER OFF function are activated. Press the STOP button until the 'TIMER OFF' indicator show on the display.</li> </ul>
No sound from one channel or unbalanced left and right volume.	<ul style="list-style-type: none"> <li>• Check the speaker connections of the inoperative channel.</li> </ul>
Reversed left and right sound.	<ul style="list-style-type: none"> <li>• Check the speaker cord connection and speaker location.</li> </ul>
Lack of bass sound or apparently imprecise physical location of musical instruments.	<ul style="list-style-type: none"> <li>• Check that the speakers are connected the correct way round.</li> </ul>
Severe hum or noise.	<ul style="list-style-type: none"> <li>• The TV or VCR is too close to the stereo system. Separate the stereo system from the TV or VCR.</li> </ul>
<b>RADIO RECEPTION</b>	
The FM STEREO indicator flashes. Severe hum or noise.	<ul style="list-style-type: none"> <li>• Adjust the antenna wire.</li> </ul>
The stereo FM program cannot be received in stereo.	<ul style="list-style-type: none"> <li>• Set the MODE switch to FM MONO, the FM STEREO light will go out.</li> </ul>
<b>CD PLAYER OPERATION</b>	
CD door does not close due to power off or other functions are selected without closing it first.	<ul style="list-style-type: none"> <li>• Press the FUNCTION button to select CD mode and press the DISC SKIP button. The door will close.</li> </ul>
Play does not start.	<ul style="list-style-type: none"> <li>• The disc's are not placed correctly.</li> <li>• Dirty disc.</li> <li>• The disc is inserted upside down.</li> <li>• The player is in the pause mode.</li> </ul>
Distorted playback or sound loss during CD playback.	<ul style="list-style-type: none"> <li>• Moisture condensation</li> <li>• CD disc is dirty or scratched.</li> </ul>

## SPECIFICATIONS

Power consumption 150W  
Power requirements AC ~ 120V 60Hz

Specifications and external appearance are subject to change without advance notice due to continuous product improvement.

Printed in China  
811-277591-240