



# SERVICE MANUAL

# DA-4 CHASSIS

<u>MODEL NAME</u>	<u>REMOTE COMMANDER</u>	<u>DESTINATION</u>	<u>CHASSIS NO.</u>
<i>KV-32HS500</i>	<i>RM-Y186</i>	<i>US</i>	<i>SCC-S66A-A</i>
<i>KV-32HS500</i>	<i>RM-Y186</i>	<i>CND</i>	<i>SCC-S70A-A</i>
<i>KV-32HV600</i>	<i>RM-Y187</i>	<i>US</i>	<i>SCC-S66B-A</i>
<i>KV-34DRC500</i>	<i>RM-Y186</i>	<i>LATIN NORTH</i>	<i>SCC-S71A-A</i>
<i>KV-34DRC500</i>	<i>RM-Y186</i>	<i>LATIN SOUTH</i>	<i>SCC-S71B-A</i>
<i>KV-34XBR800</i>	<i>RM-Y188</i>	<i>US</i>	<i>SCC-S66F-A</i>
<i>KV-34XBR800</i>	<i>RM-Y188</i>	<i>CND</i>	<i>SCC-S70D-A</i>
<i>KV-36HS500</i>	<i>RM-Y186</i>	<i>US</i>	<i>SCC-S66C-A</i>
<i>KV-36HS500</i>	<i>RM-Y186</i>	<i>CND</i>	<i>SCC-S70B-A</i>
<i>KV-36HS500</i>	<i>RM-Y186</i>	<i>HAWAII</i>	<i>SCC-S69B-A</i>
<i>KV-36XBR800</i>	<i>RM-Y187</i>	<i>US</i>	<i>SCC-S66D-A</i>
<i>KV-36XBR800</i>	<i>RM-Y187</i>	<i>CND</i>	<i>SCC-S70C-A</i>
<i>KV-36XBR800</i>	<i>RM-Y187</i>	<i>HAWAII</i>	<i>SCC-S69C-A</i>
<i>KV-38DRC500</i>	<i>RM-Y186</i>	<i>LATIN NORTH</i>	<i>SCC-S71C-A</i>
<i>KV-38DRC500</i>	<i>RM-Y186</i>	<i>LATIN SOUTH</i>	<i>SCC-S71D-A</i>
<i>KV-40XBR800</i>	<i>RM-Y187</i>	<i>US</i>	<i>SCC-S66E-A</i>
<i>KV-40XBR800</i>	<i>RM-Y187</i>	<i>CND</i>	<i>SCC-S70E-A</i>
<i>KV-40XBR800</i>	<i>RM-Y187</i>	<i>HAWAII</i>	<i>SCC-S69A-A</i>
<i>KV-42DRC800</i>	<i>RM-Y187</i>	<i>LATIN NORTH</i>	<i>SCC-S71E-A</i>

## CORRECTION - 1

SUBJECT: M BOARD P/N CORRECTED ON  
PARTS LIST

Correct the service manual as shown.  
File this Correction with the service manual.

SECTION 7: ELECTRICAL PARTS LIST (Page 295)

TRINITRON® COLOR TELEVISION

**SONY®**

☛ : Corrected Item

SECTION 7: ELECTRICAL PARTS LIST (Page 295)

INCORRECT

CORRECT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	A-1401-253-A	M BOARD (VAR), MOUNTED		A-1300-320-A	M BOARD, COMPLETE