

ARMACO

A958

UNIVERSAL AUTO STEREO CABLE

1. USING FIGURE No.1 SELECT THE CONFIGURATION NEEDED FOR YOUR CAR STEREO.
2. ORIENT PART "A" OF PLUG CASE IN SAME DIRECTION AS IT IS SHOWN IN FIGURE No.1 (USE GUIDE PIN ON EDGE OF CASE AS REFERENCE POINT.)
NOTE: PART "A" OF PLUG CASE WILL BE FOUND PREATTACHED TO RED FUSED LEAD AS THE LEAD POSITION IS THE SAME IN ALL SIX CONFIGURATIONS.
3. REFER TO FIGURE No.2 INSERT THE REMAINING COLORED LEADS INTO PART "A" IN DIRECTION OF ARROW.
4. REFER TO FIGURE No.3 SLIP PART "B" OF PLUG CASE OVER CONTACT PINS AND SECURE WITH SMALL SELF TAPPING SCREW PROVIDED.(Caution DO NOT OVER TIGHTEN SCREW.)

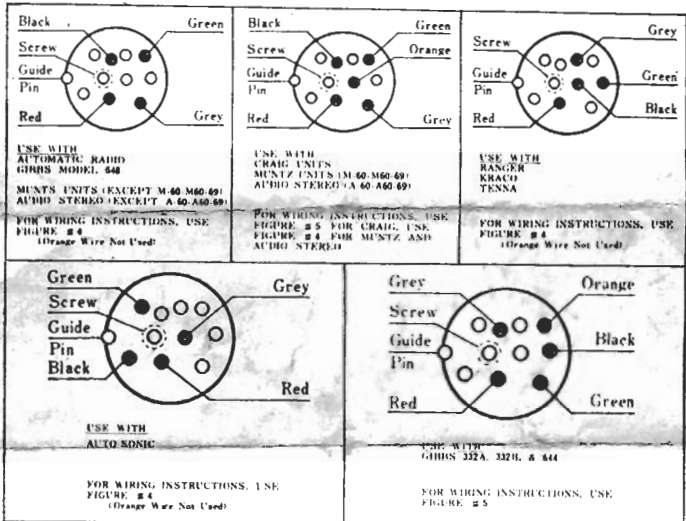


Fig. 1

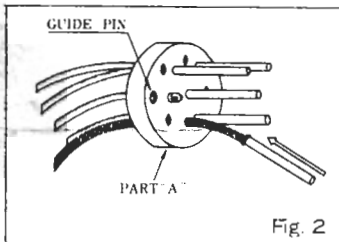


Fig. 2

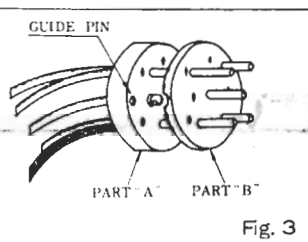


Fig. 3

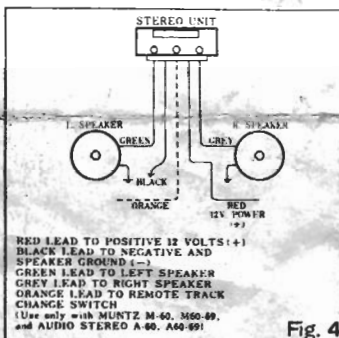


Fig. 4

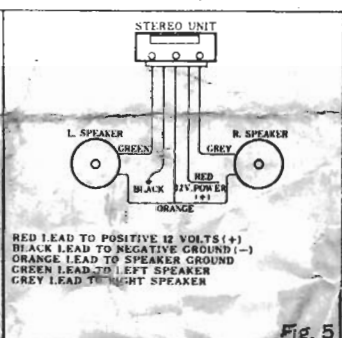


Fig. 5

SPECIAL NOTE: FIGURE No.3, WHEN PLACING PART "B" OVER PART "A" HOLD PART "A" WITH THUMB AND INDEX FINGER AND PLACE WIRE LEADS IN PALM OF SAME HAND AND PULL TIGHT MAKING THE CONTACT PINS STAND STRAIGHT AND FIRM SO THAT PART "B" CAN BE ALIGNED WITH GUIDE PIN AND SLIPPED OVER THE CONTACT PINS ON PART "A" WITH EASE.

R. MACK & CO., LTD.