


NOTES: TO PROGRAM ALTERNATE EEPROM USING "T6" DIAGNOSTIC PROGRAM AS FOLLOWS:

1. DOWNLOAD PRIMARY EEPROM DATA & SAVE.
2. MAKE CHANGES & SAVE WITH NEW FILE NAME.
3. REVERSE SWITCH "S"
4. USE "F4" BLOCK STATUS, "M" (MODIFY) & "F9" (SEND) TO PUT MODIFIED PROGRAM IN ALTERNATE EEPROM.

PHYSICAL DETAIL

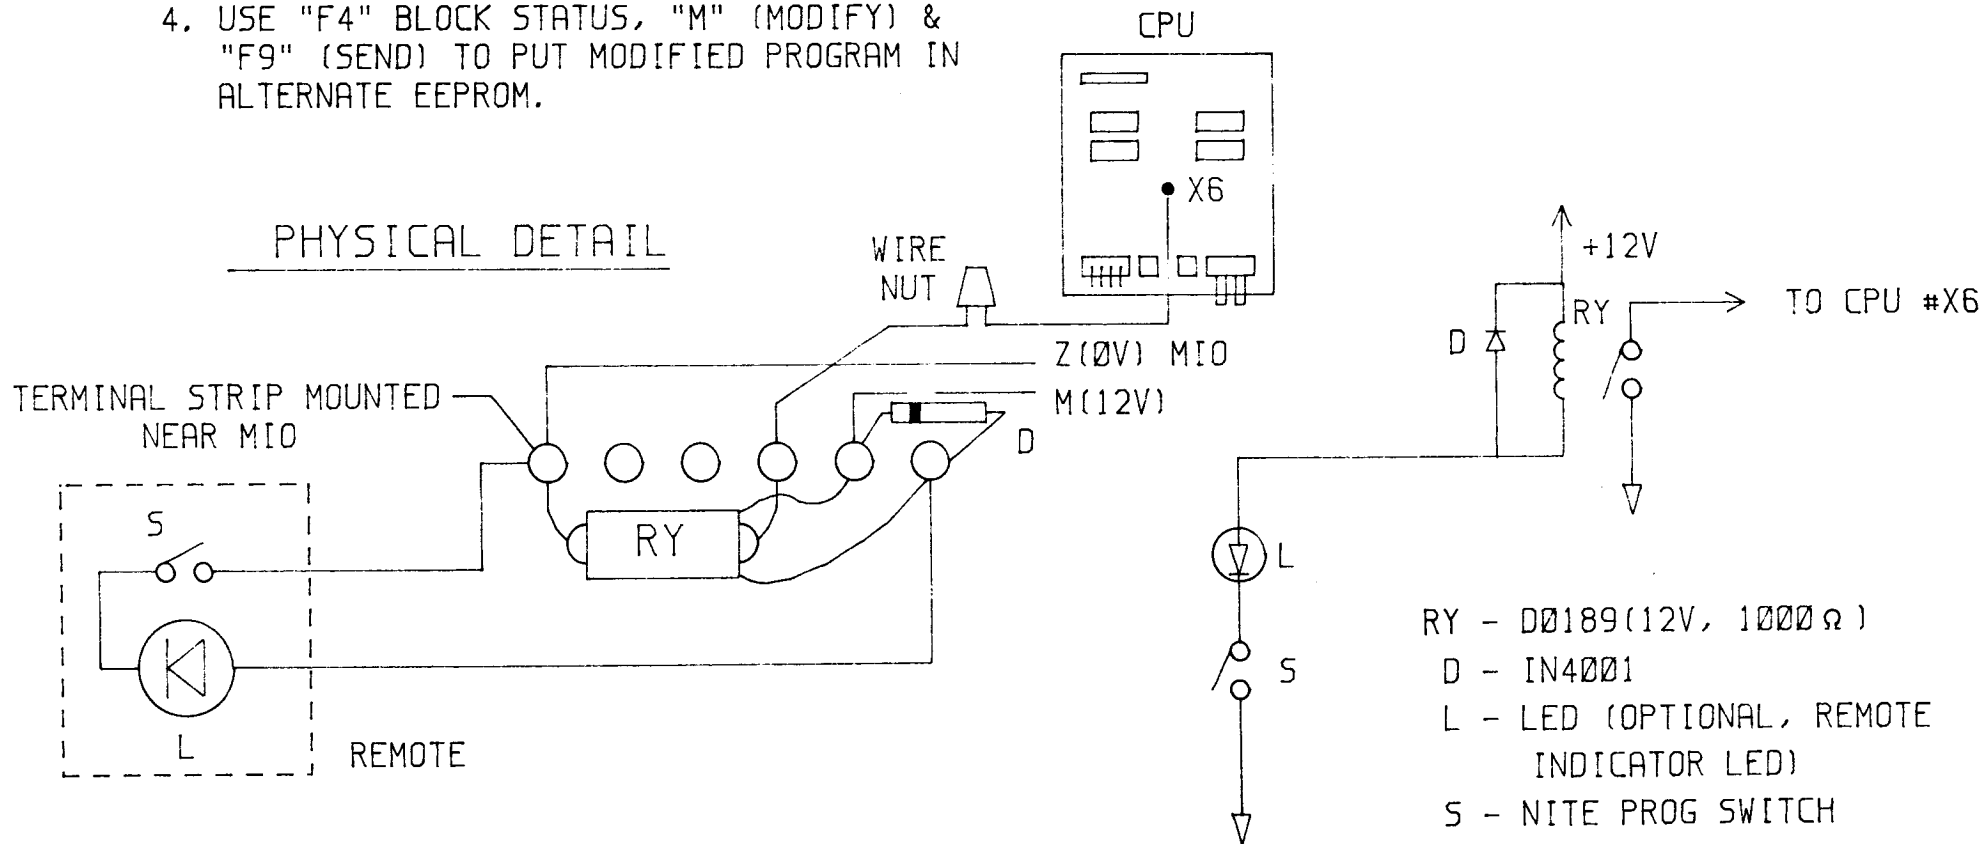

TELECENTER IV
 TC4 ALTERNATE EEPROM REMOTE SWITCH WIRING
 RAULAND-BORG CORP.
 MADE IN U.S.A.
 KM0896-0