EC10499

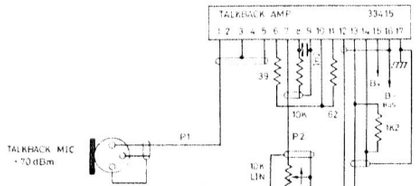

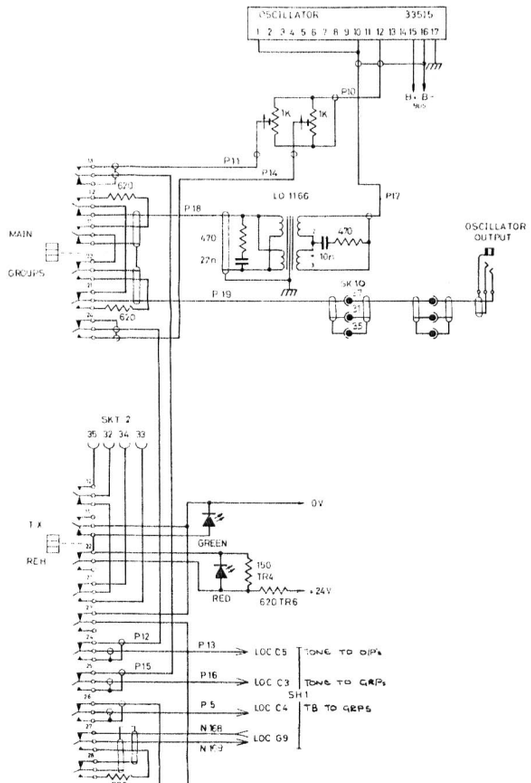

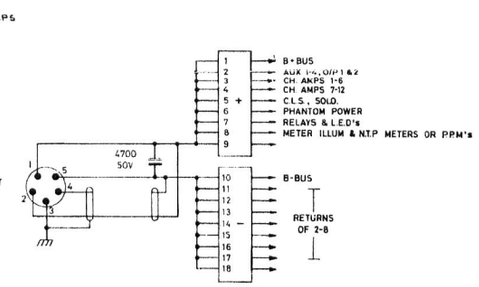

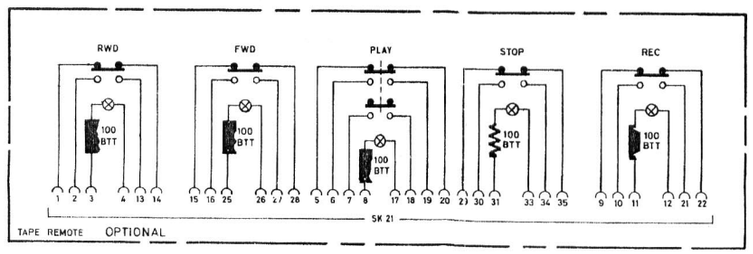

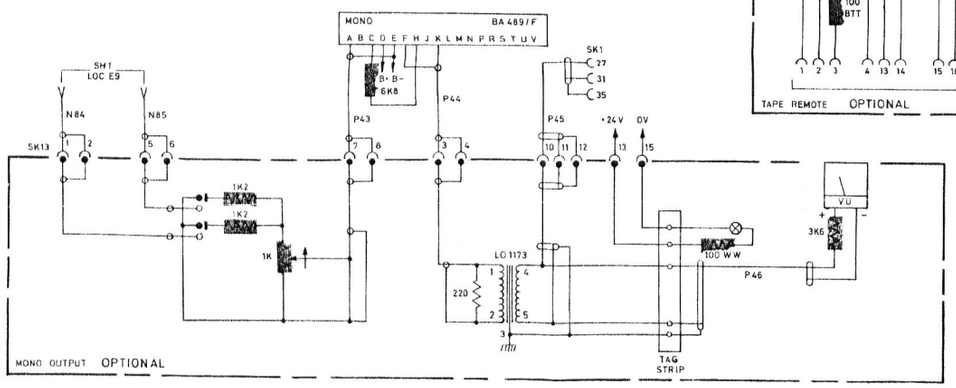

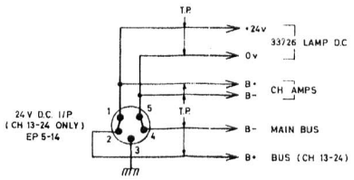

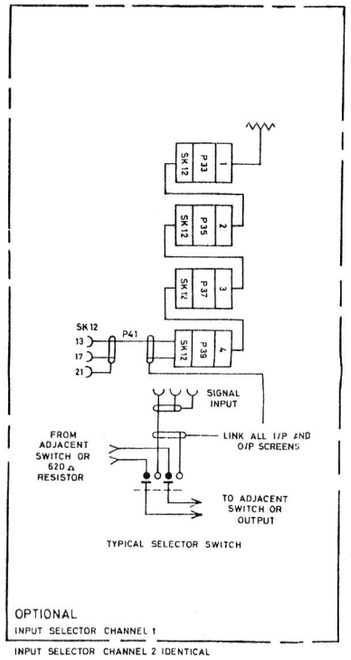

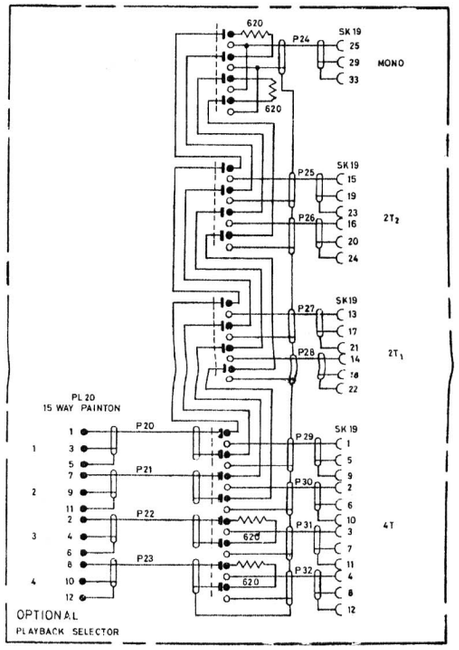

SOCKET 5 — MIC INPUT CHANNELS 1 TO 12

CABLE	R	B	S
NN1	1	5	9
NN2	2	6	10
NN3	3	7	11
NN4	4	8	12
NN5	13	17	21
NN6	14	18	22
NN7	15	19	23
NN8	16	20	24
NN9	25	29	33
NN10	26	30	34
NN11	27	31	35
NN12	28	32	

SOCKET 15 — MIC INPUT CHANNELS 13 TO 24

CABLE	R	B	S
NN13	1	5	9
NN14	2	6	10
NN15	3	7	11
NN16	4	8	12
NN17	13	17	21
NN18	14	18	22
NN19	15	19	23
NN20	16	20	24
NN21	25	29	33
NN22	26	30	34
NN23	27	31	35
NN24	28	32	

SOCKET 7 — LINE INPUT CHANNELS 1 TO 12

CABLE	R	B	S
NM1	1	5	9
NM2	2	6	10
NM3	3	7	11
NM4	4	8	12
NM5	13	17	21
NM6	14	18	22
NM7	15	19	23
NM8	16	20	24
NM9	25	29	33
NM10	26	30	34
NM11	27	31	35
NM12	28	32	

SOCKET 17 — LINE INPUT CHANNELS 13 TO 24

CABLE	R	B	S
NM13	1	5	9
NM14	2	6	10
NM15	3	7	11
NM16	4	8	12
NM17	13	17	21
NM18	14	18	22
NM19	15	19	23
NM20	16	20	24
NM21	25	29	33
NM22	26	30	34
NM23	27	31	35
NM24	28	32	

SOCKET 10 — TAPE, DIRECT & METER INPUTS

CABLE	R	B	S	
N 25N	1	5	9	N 96
N 26N	2	6	10	N 97
N 27N	3	7	11	N 98
N 28N	4	8	12	N 99
N 53	13	17	21	DIR I/P 1
N 54	14	18	22	DIR I/P 2
N 139	15	19	23	METER 1
N 140	16	20	24	METER 2
N 92	25	29	33	EXT 1
N 93	26	30	34	EXT 2
P 19	27	31	35	OSC
	28	32		

INSERTIONS

CHANNEL 1-12 (OUT) — 5

CABLE	R	B	S
NP1		5	9
NP2		6	10
NP3	3	7	11
NP4	4	8	12
NP5	13	17	21
NP6	14	18	22
NP7	15	19	23
NP8	16	20	24
NP9	25	29	33
NP10	26	30	34
NP 11	27	31	35
NP 12	28	32	

CHANNEL 13-24 (OUT) — 15

CABLE	R	B	S
NP13	1	5	9
NP14	2	6	10
NP15	3	7	11
NP16	4	8	12
NP17	13	17	21
NP18	14	18	22
NP19	15	19	23
NP20	16	20	24
NP21	25	29	33
NP22	26	30	34
NP23	27	31	35
NP 24	28	32	

OUTPUT(OUT) — 3

CABLE	R	B	S
N86	1	5	9
N87	2	6	10
N13	3	7	11
N14	4	8	12
N15	13	17	21
N16	14	18	22
N151	15	19	23
N152	16	20	24
N155	25	29	33
N156	26	30	34
N169	27	31	35
N72 N73	28	32	

CHANNEL 1-12 (IN) — 5

CABLE	R	B	S
NQ1	1	5	9
NQ2	2	6	10
NQ3	3	7	11
NQ4	4	8	12
NQ5	13	17	21
NQ6	14	18	22
NQ7	15	19	23
NQ8	16	20	24
NQ9	25	29	33
NQ10	26	30	34
NQ 11	27	31	35
NQ 12	28	32	

CHANNEL 13-24 (IN) — 16

CABLE	R	B	S
NQ13	1	5	9
NQ 14	2	6	10
NQ 15	3	7	11
NQ 16	4	8	12
NQ 17	13	17	21
NQ 18	14	18	22
NQ 19	15	19	23
NQ 20	16	20	24
NQ 21	25	29	33
NQ 22	26	30	34
NQ 23	27	31	35
NQ 24	28	32	

OUTPUT(IN) — 4

CABLE	R	B	S
N85	1	5	9
N 14	2	6	10
N17 N21	3	7	11
N18 N22	4	8	12
N19 N23	13	17	21
N20 N24	14	18	22
N159	15	19	23
N160	16	20	24
N161	25	29	33
N162	26	30	34
N170	27	31	35
N74	28	32	

SOCKET 1 — OUTPUT GROUP / AUX / MONO

	CABLE	R	B	S
1	N88 N90	1	5	9
2	N89 N91	2	6	10
1	N21 N133	3	7	11
2	N22 N134	4	8	12
3	N23 N135	13	17	21
4	N24 N136	14	18	22
1	N153 N163	15	19	23
2	N160 N164	16	20	24
3	N161 N165	25	29	33
4	N162 N166	26	30	34
	P45	27	31	35
		28	32	

SOCKET 2 — STUDIO L/S O/P; TALKBACK 1 P8, 2 P9; TX/REH

CABLE	R	B	S
N171	1	5	9
	2	6	10
	3	7	11
	4	8	12
	13	17	21
P8	14	18	22
P9	15	19	23
REMOTES	28	29	
REMOTES	30	31	
REMOTES	32	33	
REMOTES	34	35	

12 — INPUT SELECTOR 1 OUT; INPUT SELECTOR 2 OUT

CABLE	R	B	S
P33	1	5	9
P35	2	6	10
P37	3	7	11
P39	4	8	12
P41	13	17	21
	14	18	22
	15	19	23
P34	16	20	24
P36	25	29	33
P38	26	30	34
P40	27	31	35
P42	28	32	

19 — PLAYBACK SELECTOR 4T1, 4T2, 4T3, 4T4, 2T1 L, 2T2 R, 2T2 L, 2T1 R, MONO

CABLE	R	B	S
P29	1	5	9
P30	2	6	10
P31	3	7	11
P32	4	8	12
P27	13	17	21
P28	14	18	22
P25	15	19	23
P26	16	20	24
P24	25	29	33
	26	30	34
	27	31	35
	28	32	

9 — MON

CABLE	R	B	S
N117	1	5	9
N118	2	6	10
N119	3	7	11
N120	4	8	12

11 11 — FADER REMOTES CHANNEL / COMMON

PIN	PIN
1	13
2	14
3	15
4	16
5	17
6	18
7	19
8	20
9	21
10	22
11	23
12	24
35	

SK 13 — MONO

CABLE	R	B	S
P45		11	12
N84		1	2
N85		5	6
P43		7	8
P44		3	4
0v			15
+24v			13

15 WAY PAINTON

PL 20 — P/B SEL OUTPUT

	CABLE	R	B	S
1	P20	1	3	5
2	P21	7	9	11
3	P22	2	4	6
4	P23	8	10	12

15 WAY PAINTON

SK 14 — TAPE

	CABLE	R	B	S
1	N96 N25	1	3	5
2	N97 N26	7	9	11
3	N98 N27	2	4	6
4	N99 N28	8	10	12

15 WAY PAINTON

LAST CODE P50

www.waltzingbear.com
Digitization by Waltzing Bear Audio

3	2	1	ISSUE	A4386	MATL
30-1-81	13-4-78	23-11-77	DATE		FINISH
20336	50128		DRN	B.W.M.	SPEC 5315
			SCALE		
			CHECKED		TITLE 12/24 CHANNEL, 4 GROUP, 2 OUTPUT CONSOLE.
			APPROVED		

UNLESS OTHERWISE STATED: LINEAR AND ANGULAR MOMS. — DIMS IN INCHES

DWG. NO. SH. 2 OF 2 EC10499

Rupert Neve & Company Ltd. 1977 © AC