

# TALKING SCALE

## CAUTION:

- DO NOT EXCEED THE MAX WEIGHT LIMIT OF 330LBS.
- GLASS IS SLIPPERY WHEN WET. KEEP GLASS PLATFORM DRY TO AVOID SLIPPING.
- DO NOT STRIKE OR DROP THE ITEM.
- ALWAYS KEEP THE SCALE IN A HORIZONTAL POSITION.
- DO NOT USE FOR COMMERCIAL PURPOSES. THE ITEM IS DESIGNED FOR HOME USE ONLY.


## Battery Installation:

- Unsnap the battery cover located on the underside of the scale.
- Insert two AAA batteries (not Included) matching the polarity inside the battery compartment and replace the battery cover.

## Convert Scale from lb to kg:

- Press and hold the unit button (located on the underside of the scale above the speaker) to turn the scale ON or simply step on to it.
- Press the unit button to switch between kg & lb. The measurement unit will be displayed on the right side of the LCD screen.

Display Layout

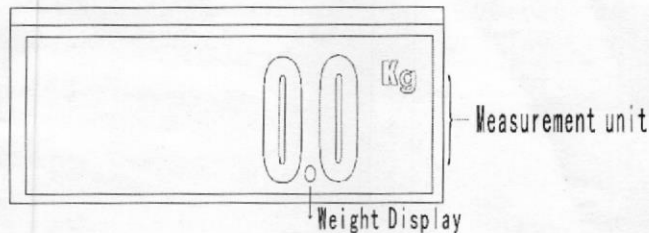

## Operation: *\*For sure accuracy, place the scale on a hard, flat floor. Avoid carpet or soft surfaces.*

- The scale will automatically turn ON when you step on to it. Stand evenly on the scale without moving and wait until the display blinks. Then step off to view your weight reading.
- Weight reading will be displayed on the LCD screen.
- The scale will shut off automatically after reading your weight twice or if left idle for more than 8 seconds.
- The talking function can be disabled by pressing and holding the unit button (when the scale is ON) until the screen displays "OFF". Repeat to until the screen displays "ON" to enable.

## Display Indicators:

- **Overload indication (Err)** - Scale overload, please step off to avoid damage to the item.
- **Low battery indication (Lo)** - Battery power is low, please replace batteries.

## Care Instructions:

- Treat the scale with care as it is a precise instrument.
- Clean the scale with damp cloth DO NOT let water get inside the scale to avoid damage to the item.
- Store the scale in cool dry place.

## Technical Specs:

Max Capacity - 330lbs/150kgs

Min Capacity - 11lbs/5kgs

Weight Units - kg/lbs